

Enterprise Session Border Controller (E-SBC)

AudioCodes Mediant™ Series

Interoperability Laboratory

# Configuration Note

## Microsoft® Lync™ Server 2013 with Broadvox SIP Trunk using AudioCodes E-SBC



**Microsoft** Partner  
Gold Unified Communications



June 2013

Document # LTRT-40830



---

## Table of Contents

---

<b>1</b>	<b>Introduction .....</b>	<b>9</b>
1.1	Intended Audience .....	9
1.2	About AudioCodes E-SBC Product Series.....	9
<b>2</b>	<b>Component Information.....</b>	<b>11</b>
2.1	AudioCodes E-SBC Version .....	11
2.2	Broadvox SIP Trunking Version.....	11
2.3	Microsoft Lync Server 2013 Version .....	11
2.4	Interoperability Test Topology .....	12
2.4.1	Environment Setup .....	13
2.4.2	Known Limitations.....	13
<b>3</b>	<b>Configuring Lync Server 2013 .....</b>	<b>15</b>
3.1	Configuring the E-SBC as an IP / PSTN Gateway .....	15
3.2	Configuring the "Route" on Lync Server 2013.....	23
<b>4</b>	<b>Configuring AudioCodes E-SBC.....</b>	<b>31</b>
4.1	Step 1: IP Network Interfaces Configuration .....	32
4.1.1	Step 1a: Configure Network Interfaces.....	33
4.1.2	Step 1b: Configure the Native VLAN ID .....	34
4.2	Step 2: Enable the SBC Application .....	35
4.3	Step 3: Signaling Routing Domains Configuration .....	36
4.3.1	Step 3a: Configure Media Realms.....	36
4.3.2	Step 3b: Configure SRDs .....	38
4.3.3	Step 3c: Configure SIP Signaling Interfaces .....	39
4.4	Step 4: Configure Proxy Sets .....	40
4.5	Step 5: Configure IP Groups.....	42
4.6	Step 6: Configure IP Profiles .....	44
4.7	Step 7: Configure Coders .....	49
4.8	Step 8: SIP TLS Connection Configuration.....	51
4.8.1	Step 8a: Configure the NTP Server Address.....	51
4.8.2	Step 8b: Configure a Certificate .....	52
4.9	Step 9: Configure SRTP .....	57
4.10	Step 10: Configure Maximum IP Media Channels .....	58
4.11	Step 11: Configure IP-to-IP Call Routing Rules .....	59
4.12	Step 12: Configure IP-to-IP Manipulation Rules.....	64
4.13	Step 13: Configure Registration Accounts .....	67
4.14	Step 14: Miscellaneous Configuration.....	68
4.14.1	Step 14a: Configure DNS Query Methods .....	68
4.14.2	Step 14b: Configure Call Forking Mode .....	69
4.15	Step 15: Reset the E-SBC .....	70
<b>Appendix A</b>	<b>AudioCodes INI File .....</b>	<b>71</b>

---

## List of Figures

---

Figure 2-1: Interoperability Test Topology between E-SBC and Microsoft Lync with Broadvox SIP Trunk.....	12
Figure 3-1: Starting the Lync Server Topology Builder .....	15
Figure 3-2: Topology Builder Dialog Box.....	16
Figure 3-3: Save Topology Dialog Box.....	16
Figure 3-4: Downloaded Topology .....	17
Figure 3-5: Choosing New IP/PSTN Gateway .....	17
Figure 3-6: Define the PSTN Gateway FQDN.....	18
Figure 3-7: Define the IP Address .....	18
Figure 3-8: Define the Root Trunk.....	19
Figure 3-9: E-SBC added as IP/PSTN Gateway and Trunk Created.....	20
Figure 3-10: Choosing Publish Topology .....	20
Figure 3-11: Publish the Topology .....	21
Figure 3-12: Publishing in Progress .....	21
Figure 3-13: Publishing Wizard Complete.....	22
Figure 3-14: Opening the Lync Server Control Panel .....	23
Figure 3-15: Lync Server Credentials.....	24
Figure 3-16: Microsoft Lync Server 2013 Control Panel .....	24
Figure 3-17: Voice Routing Page .....	25
Figure 3-18: Route Tab .....	25
Figure 3-19: Adding New Voice Route .....	26
Figure 3-20: Adding New Trunk .....	26
Figure 3-21: List of Deployed Trunks .....	27
Figure 3-22: Selected E-SBC Trunk.....	27
Figure 3-23: Associating PSTN Usage to Route .....	28
Figure 3-24: Confirmation of New Voice Route.....	28
Figure 3-25: Committing Voice Routes .....	29
Figure 3-26: Uncommitted Voice Configuration Settings .....	29
Figure 3-27: Confirmation of Successful Voice Routing Configuration .....	30
Figure 3-28: Voice Routing Screen Displaying Committed Routes .....	30
Figure 4-1: Network Interfaces in Interoperability Test Topology.....	32
Figure 4-2: Configured Network Interfaces in IP Interfaces Table .....	34
Figure 4-3: Configured Port Native VLAN .....	34
Figure 4-4: Enabling SBC Application .....	35
Figure 4-5: Configuring Media Realm for LAN .....	36
Figure 4-6: Configuring Media Realm for WAN.....	37
Figure 4-7: Configured Media Realms in Media Realm Table .....	37
Figure 4-8: Configuring LAN SRD .....	38
Figure 4-9: Configuring WAN SRD.....	38
Figure 4-10: Configured SIP Interfaces in SIP Interface Table .....	39
Figure 4-11: Configuring Proxy Set for Microsoft Lync Server 2013.....	40
Figure 4-12: Configuring Proxy Set for Broadvox SIP Trunk .....	41
Figure 4-13: Configured IP Groups in IP Group Table .....	43
Figure 4-14: Configuring IP Profile for Lync Server 2013 .....	46
Figure 4-15: Configuring IP Profile for Broadvox SIP Trunk .....	48
Figure 4-16: Configuring Coder Group for Broadvox SIP Trunk .....	49
Figure 4-17: Configuring Allowed Coders Group for Broadvox SIP Trunk.....	50
Figure 4-18: SBC Preferences Mode .....	50
Figure 4-19: Configuring NTP Server Address.....	51
Figure 4-20: Certificates Page - Creating CSR .....	52
Figure 4-21: Microsoft Certificate Services Web Page .....	53
Figure 4-22: Request a Certificate Page .....	53
Figure 4-23: Advanced Certificate Request Page.....	54
Figure 4-24: Submit a Certificate Request or Renewal Request Page.....	54
Figure 4-25: Certificate Issued Page.....	55
Figure 4-26: Download a CA Certificate, Certificate Chain, or CRL Page .....	55
Figure 4-27: Certificates Page (Uploading Certificate).....	56

---

Figure 4-28: Configuring SRTP .....	57
Figure 4-29: Configuring Number of IP Media Channels .....	58
Figure 4-30: Configuring IP-to-IP Routing Rule for Terminating SIP OPTIONS from LAN.....	60
Figure 4-31: Configuring IP-to-IP Routing Rule for LAN to WAN.....	61
Figure 4-32: Configuring IP-to-IP Routing Rule for WAN to LAN.....	62
Figure 4-33: Configured IP-to-IP Routing Rules in IP-to-IP Routing Table.....	63
Figure 4-34: Configuring IP-to-IP Outbound Manipulation Rule – Rule Tab.....	65
Figure 4-35: Configuring IP-to-IP Outbound Manipulation Rule - Action Tab.....	65
Figure 4-36: Example of Configured IP-to-IP Outbound Manipulation Rules .....	66
Figure 4-37: Configuring SIP Registration Account .....	67
Figure 4-38: Configuring DNS Query Methods .....	68
Figure 4-39: Configuring Forking Mode.....	69
Figure 4-40: Resetting the E-SBC.....	70

---

## List of Tables

---

Table 2-1: AudioCodes E-SBC Version .....	11
Table 2-2: Broadvox Version .....	11
Table 2-3: Microsoft Lync Server 2013 Version .....	11
Table 2-4: Environment Setup .....	13

## Notice

This document describes how to connect the Microsoft Lync Server 2013 and Broadvox SIP Trunk using AudioCodes Mediant E-SBC product series, which includes the Mediant 800 Gateway & E-SBC, Mediant 1000B Gateway & E-SBC, Mediant 3000 Gateway & E-SBC, and Mediant 4000 E-SBC.

Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published, nor can it accept responsibility for errors or omissions. Updates to this document and other documents as well as software files can be viewed by registered customers at <http://www.audiocodes.com/downloads>.

© Copyright 2013 AudioCodes Ltd. All rights reserved.

This document is subject to change without notice.

Date Published: June 3, 2013

## Trademarks

AudioCodes, AC, AudioCoded, Ardito, CTI2, CTI<sup>2</sup>, CTI Squared, HD VoIP, HD VoIP Sounds Better, InTouch, IPmedia, Mediant, MediaPack, NetCoder, Netrake, Nuera, Open Solutions Network, OSN, Stretto, TrunkPack, VMAS, VoicePacketizer, VolPerfect, VolPerfectHD, What's Inside Matters, Your Gateway To VoIP and 3GX are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners. Product specifications are subject to change without notice.

## WEEE EU Directive

Pursuant to the WEEE EU Directive, electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

## Customer Support

Customer technical support and service are generally provided by AudioCodes' Distributors, Partners, and Resellers from whom the product was purchased. For technical support for products purchased directly from AudioCodes, or for customers subscribed to AudioCodes Customer Technical Support (ACTS), contact [support@audiocodes.com](mailto:support@audiocodes.com).

## Documentation Feedback

AudioCodes continually strives to produce high quality documentation. If you have any comments (suggestions or errors) regarding this document, please fill out the Documentation Feedback form on our Web site at <http://www.audiocodes.com/downloads>.

**Reader's Notes**



# 1 Introduction

This Configuration Note describes how to set up the AudioCodes Enterprise Session Border Controller (hereafter, referred to as *E-SBC*) for interworking between Broadvox's SIP Trunk and Microsoft's Lync Server 2013 environment.

## 1.1 Intended Audience

The document is intended for engineers, or AudioCodes and Broadvox Partners who are responsible for installing and configuring Broadvox's SIP Trunk and Microsoft's Lync Server 2013 for enabling VoIP calls using AudioCodes E-SBC.

## 1.2 About AudioCodes E-SBC Product Series

AudioCodes' family of E-SBC devices enables reliable connectivity and security between the Enterprise's and the service provider's VoIP networks.

The E-SBC provides perimeter defense as a way of protecting Enterprises from malicious VoIP attacks; mediation for allowing the connection of any PBX and/or IP-PBX to any service provider; and Service Assurance for service quality and manageability.

Designed as a cost-effective appliance, the E-SBC is based on field-proven VoIP and network services with a native host processor, allowing the creation of purpose-built multiservice appliances, providing smooth connectivity to cloud services, with integrated quality of service, SLA monitoring, security and manageability. The native implementation of SBC provides a host of additional capabilities that are not possible with standalone SBC appliances such as VoIP mediation, PSTN access survivability, and third-party value-added services applications. This enables Enterprises to utilize the advantages of converged networks and eliminate the need for standalone appliances.

AudioCodes E-SBC is available as an integrated solution running on top of its field-proven Mediant Media Gateway and Multi-Service Business Router platforms, or as a software-only solution for deployment with third-party hardware.

**Reader's Notes**

## 2 Component Information

### 2.1 AudioCodes E-SBC Version

Table 2-1: AudioCodes E-SBC Version

<b>SBC Vendor</b>	AudioCodes
<b>Models</b>	<ul style="list-style-type: none"> <li>▪ Mediant 800 Gateway &amp; E-SBC</li> <li>▪ Mediant 1000B Gateway &amp; E-SBC</li> <li>▪ Mediant 3000 Gateway &amp; E-SBC</li> <li>▪ Mediant 4000 E-SBC</li> </ul>
<b>Software Version</b>	6.60A.229.001
<b>Protocol</b>	<ul style="list-style-type: none"> <li>▪ SIP/UDP or TCP (to the Broadvox SIP Trunk)</li> <li>▪ SIP/TCP or TLS (to the Lync FE Server)</li> </ul>
<b>Additional Notes</b>	None

### 2.2 Broadvox SIP Trunking Version

Table 2-2: Broadvox Version

<b>Vendor/Service Provider</b>	Broadvox
<b>SSW Model/Service</b>	Fusion
<b>Software Version</b>	1.0
<b>Protocol</b>	SIP/UDP or TCP
<b>Additional Notes</b>	None

### 2.3 Microsoft Lync Server 2013 Version

Table 2-3: Microsoft Lync Server 2013 Version

<b>Vendor</b>	Microsoft
<b>Model</b>	Microsoft Lync
<b>Software Version</b>	Release 2013 5.0.8308.0
<b>Protocol</b>	SIP
<b>Additional Notes</b>	None


## 2.4 Interoperability Test Topology

The interoperability testing between AudioCodes E-SBC and Broadvox SIP Trunk with Lync 2013 was done using the following topology setup:

- Enterprise deployed with Microsoft Lync Server 2013 in its private network for enhanced communication within the Enterprise.
- Enterprise wishes to offer its employees Enterprise-voice capabilities and to connect the Enterprise to the PSTN network using Broadvox's SIP Trunking service.
- AudioCodes E-SBC is implemented to interconnect between the Enterprise LAN and the SIP Trunk.
  - **Session:** Real-time voice session using the IP-based Session Initiation Protocol (SIP).
  - **Border:** IP-to-IP network border between Lync Server 2013 network in the Enterprise LAN and Broadvox's SIP Trunk located in the public network.

The figure below illustrates this interoperability test topology:

**Figure 2-1: Interoperability Test Topology between E-SBC and Microsoft Lync with Broadvox SIP Trunk**

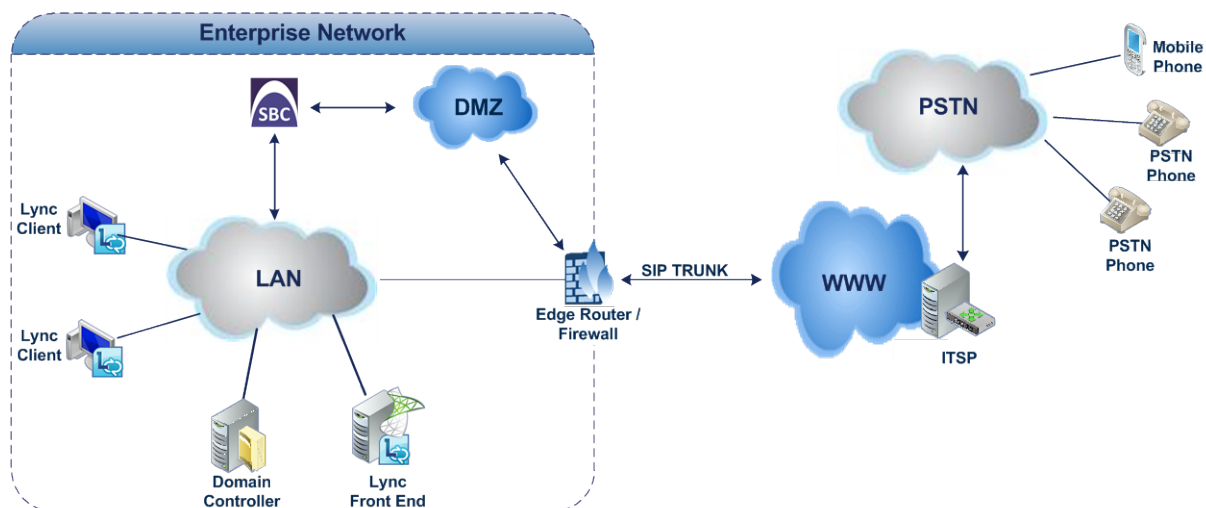

## 2.4.1 Environment Setup

The interoperability test topology includes the following environment setup:

**Table 2-4: Environment Setup**

Area	Setup
<b>Network</b>	<ul style="list-style-type: none"> <li>▪ Microsoft Lync Server 2013 environment is located on the Enterprise's LAN</li> <li>▪ Broadvox SIP Trunk is located on the WAN</li> </ul>
<b>Signaling Transcoding</b>	<ul style="list-style-type: none"> <li>▪ Microsoft Lync Server 2013 operates with SIP-over-TLS transport type</li> <li>▪ Broadvox SIP Trunk operates with SIP-over-UDP or TCP transport type</li> </ul>
<b>Codecs Transcoding</b>	<ul style="list-style-type: none"> <li>▪ Microsoft Lync Server 2013 supports G.711A-law and G.711U-law coders</li> <li>▪ Broadvox SIP Trunk supports G.711U-law and G.729 coders</li> </ul>
<b>Media Transcoding</b>	<ul style="list-style-type: none"> <li>▪ Microsoft Lync Server 2013 operates with SRTP media type</li> <li>▪ Broadvox SIP Trunk operates with RTP media type</li> </ul>

## 2.4.2 Known Limitations

The following limitation was observed in the Interoperability tests done for the AudioCodes E-SBC interworking between Microsoft Lync Server 2013 and Broadvox's SIP Trunk:

- If any of following Error Responses are sent from the Lync server:
  - Lync Client reject call with "603 Decline"
  - Lync Client set as DnD and send "480 Temporarily Unavailable"
  - Lync Client response with "404 Not Found"
  - Lync Client response with "503 Service Unavailable"

Broadvox disconnects the call only after a number of additional re-INVITES are sent.

**Reader's Notes**

## 3 Configuring Lync Server 2013

This chapter describes how to configure Microsoft Lync Server 2013 to operate with AudioCodes E-SBC.




**Note:** Dial plans, voice policies, and PSTN usages are also necessary for Enterprise voice deployment; however, they are beyond the scope of this document.

### 3.1 Configuring the E-SBC as an IP / PSTN Gateway

The procedure below describes how to configure the E-SBC as an IP / PSTN Gateway.


- **To configure E-SBC as IP/PSTN Gateway and associate it with Mediation Server:**
- 1. On the server where the Topology Builder is installed, start the Lync Server 2013 Topology Builder (Windows **Start** menu > **All Programs** > **Lync Server Topology Builder**), as shown below:

**Figure 3-1: Starting the Lync Server Topology Builder**

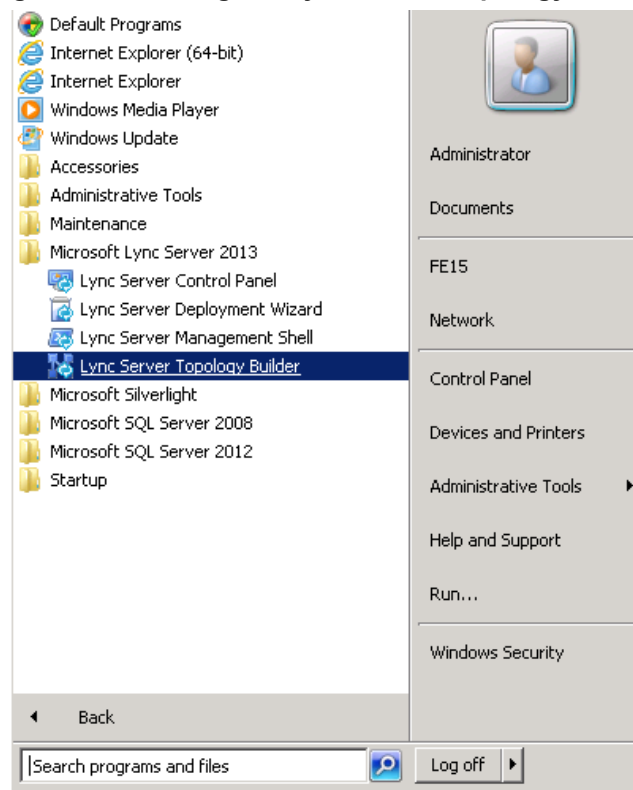


The following is displayed:

**Figure 3-2: Topology Builder Dialog Box**

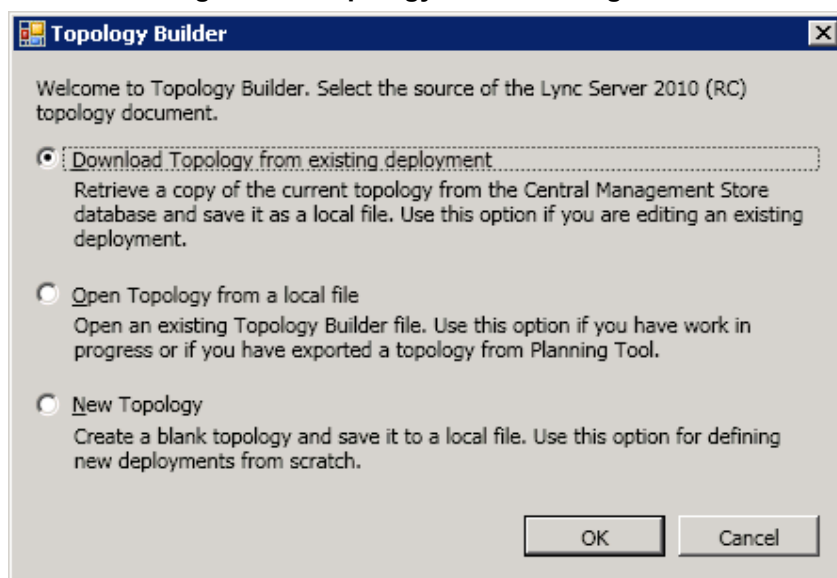

2. Select the **Download Topology from existing deployment** option, and then click **OK**; you are prompted to save the downloaded Topology:

**Figure 3-3: Save Topology Dialog Box**

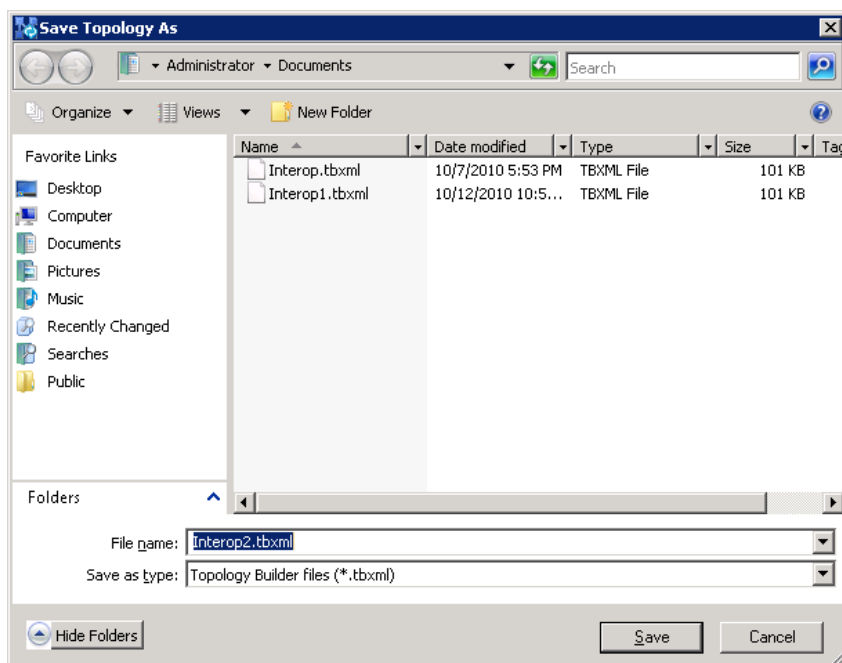


3. Enter a name for the Topology file, and then click **Save**. This step enables you to roll back from any changes you make during the installation.




The Topology Builder screen with the downloaded Topology is displayed:

**Figure 3-4: Downloaded Topology**

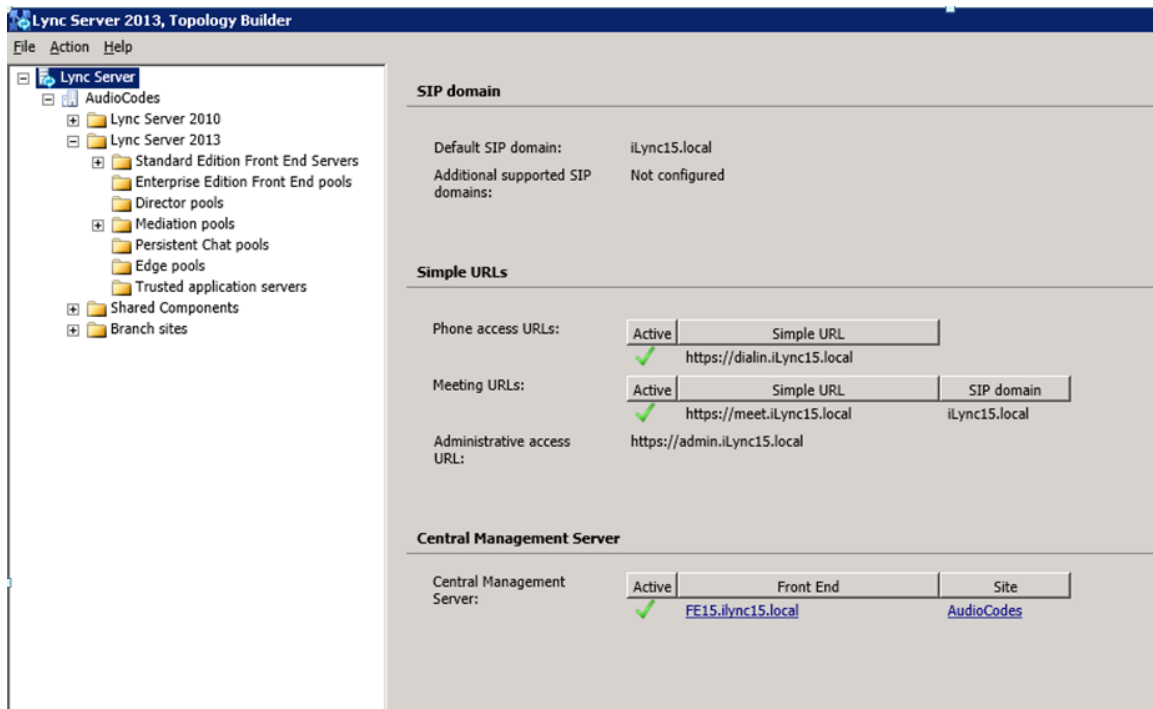


- Under the **Shared Components** node, right-click the **PSTN gateways** node, and then from the shortcut menu, choose **New IP/PSTN Gateway**, as shown below:

**Figure 3-5: Choosing New IP/PSTN Gateway**

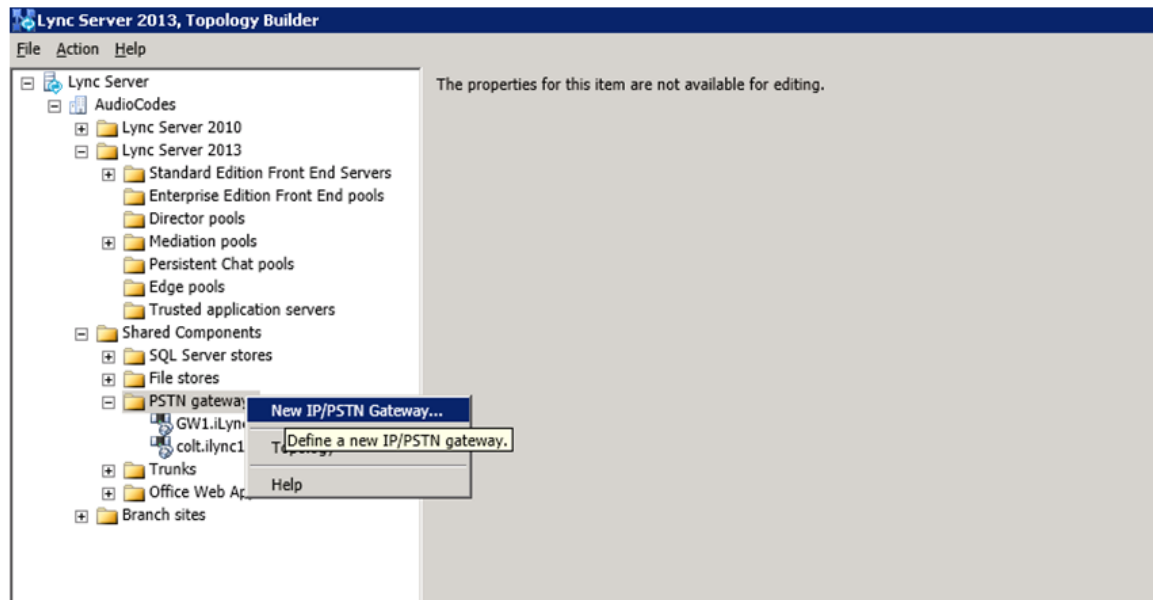


The following is displayed:

**Figure 3-6: Define the PSTN Gateway FQDN**

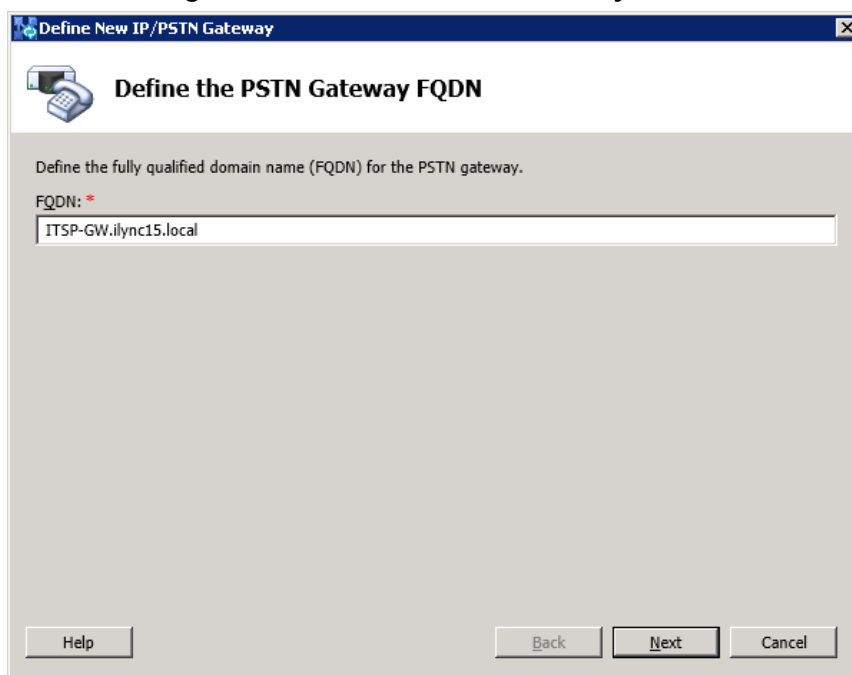

5. Enter the Fully Qualified Domain Name (FQDN) of the E-SBC (e.g., **ITSP-GW.ilync15.local**). Update this FQDN in the relevant DNS record, and then click **Next**; the following is displayed:

**Figure 3-7: Define the IP Address**

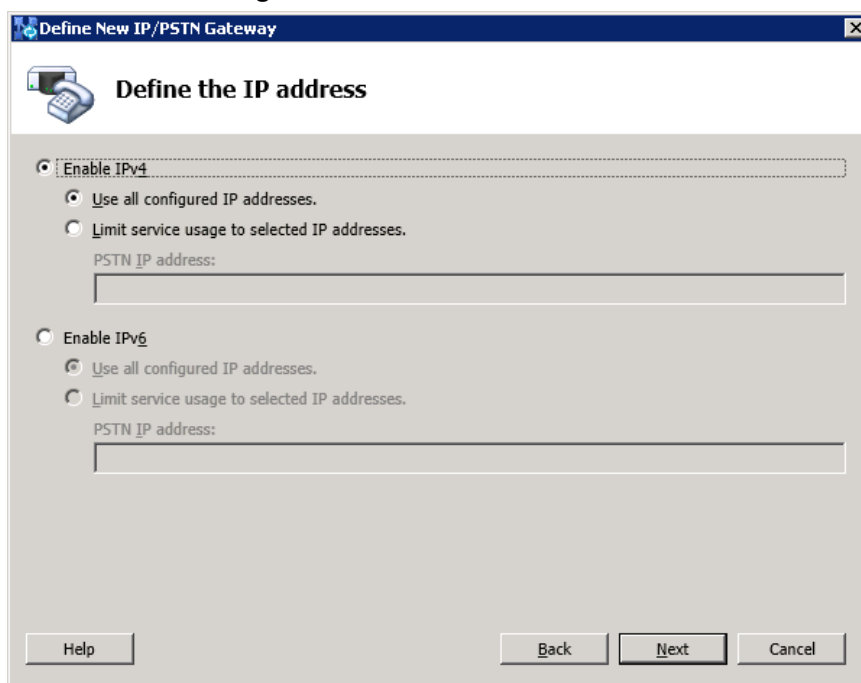

6. Define the listening mode (IPv4 or IPv6) of the IP address of your new PSTN gateway, and then click **Next**.
7. Define a *root trunk* for the PSTN gateway. A trunk is a logical connection between the Mediation Server and a gateway uniquely identified by the following combination: Mediation Server FQDN, Mediation Server listening port (TLS or TCP), gateway IP and FQDN, and gateway listening port.

**Notes:**

- When defining a PSTN gateway in Topology Builder, you must define a root trunk to successfully add the PSTN gateway to your topology.
- The root trunk cannot be removed until the associated PSTN gateway is removed.

**Figure 3-8: Define the Root Trunk**

**Define the root trunk**

Trunk name: \*  
ITSP-GW.ilync15.local

Listening port for IP/PSTN gateway: \*  
5067

SIP Transport Protocol:  
TLS

Associated Mediation Server:  
FE15.ilync15.local AudioCodes


Associated Mediation Server port: \*  
5067

Help Back Finish Cancel

- In the 'Listening Port for IP/PSTN Gateway' field, enter the listening port that the E-SBC will use for SIP messages from the Mediation Server that will be associated with the root trunk of the PSTN gateway (e.g., **5067**).
- In the 'SIP Transport Protocol' field, select the transport type (e.g., **TLS**) that the trunk uses.
- In the 'Associated Mediation Server' field, select the Mediation Server pool to associate with the root trunk of this PSTN gateway.
- In the 'Associated Mediation Server Port' field, enter the listening port that the Mediation Server will use for SIP messages from the SBC (e.g., **5067**).
- Click **Finish**.


The E-SBC is added as a PSTN gateway, and a trunk is created as shown below:

**Figure 3-9: E-SBC added as IP/PSTN Gateway and Trunk Created**

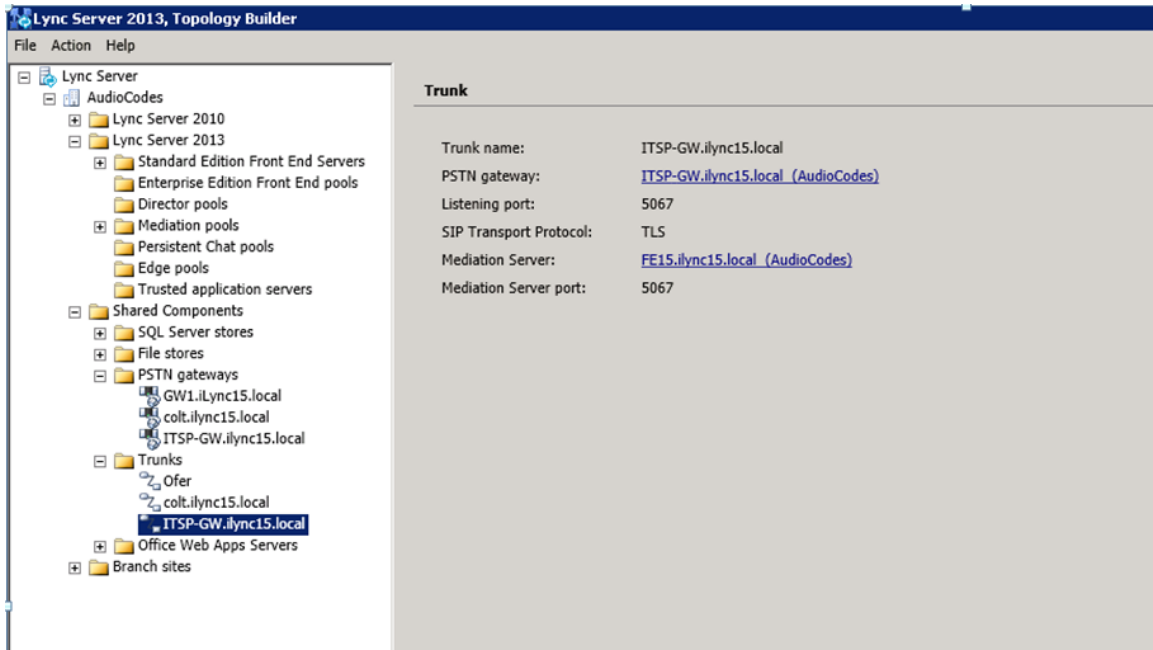


8. Publish the Topology: In the main tree, select the root node **Lync Server**, and then from the **Action** menu, choose **Publish Topology**, as shown below:

**Figure 3-10: Choosing Publish Topology**

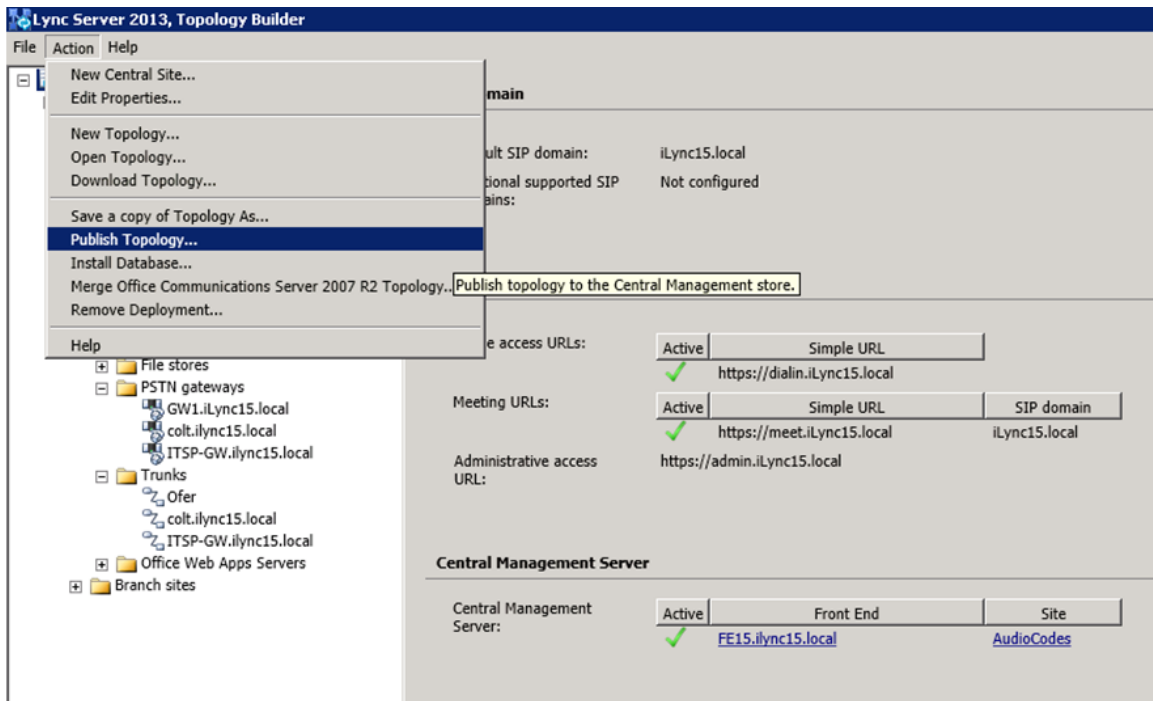


The following is displayed:

**Figure 3-11: Publish the Topology**

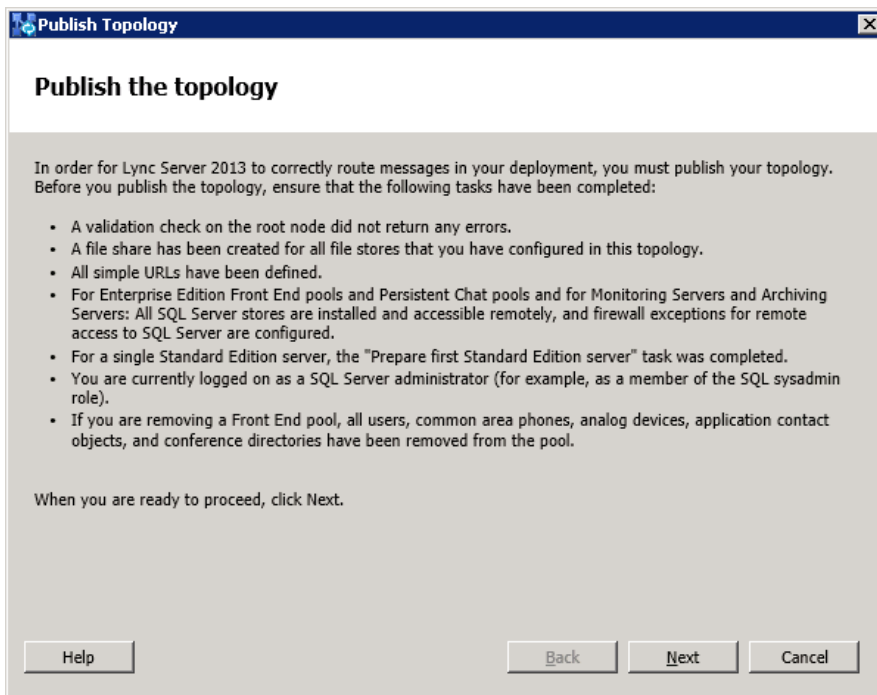


9. Click **Next**; the Topology Builder starts to publish your topology, as shown below:

**Figure 3-12: Publishing in Progress**

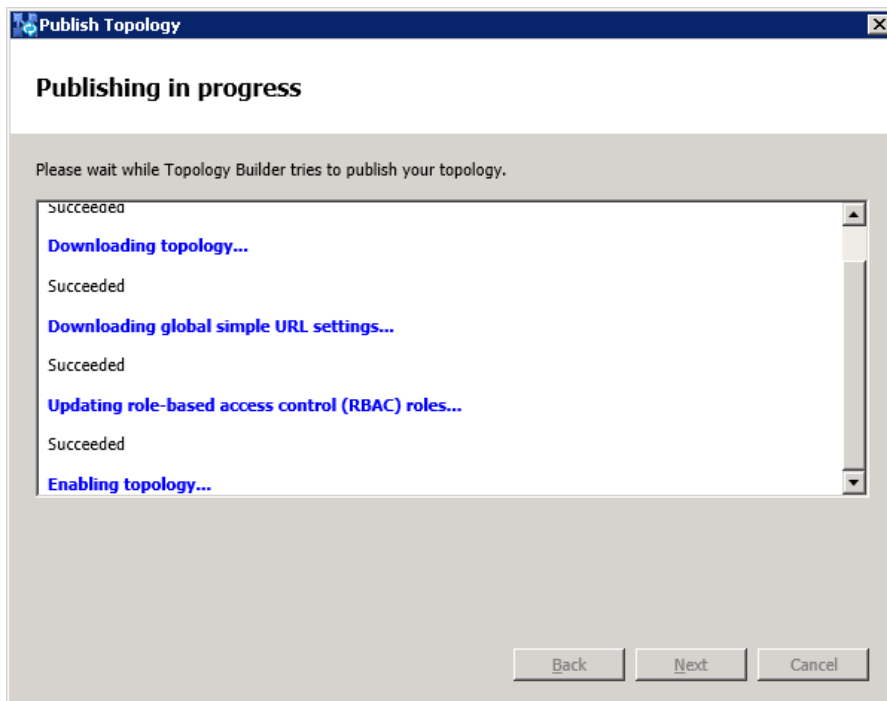

- Wait until the publishing topology process completes successfully, as shown below:

**Figure 3-13: Publishing Wizard Complete**

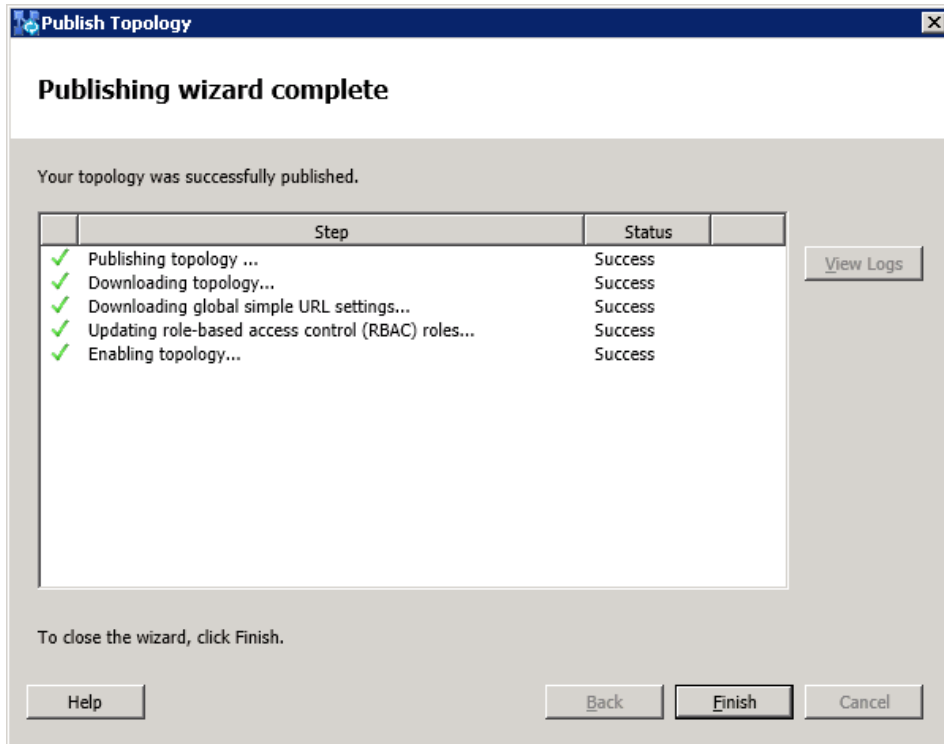

- Click **Finish**.

## 3.2 Configuring the "Route" on Lync Server 2013

The procedure below describes how to configure a "Route" on the Lync Server 2013 and to associate it with the E-SBC PSTN gateway.

➤ **To configure the "route" on Lync Server 2013:**


1. Start the Microsoft Lync Server 2013 Control Panel (**Start > All Programs > Microsoft Lync Server 2013 > Lync Server Control Panel**), as shown below:

**Figure 3-14: Opening the Lync Server Control Panel**




You are prompted to enter your login credentials:

**Figure 3-15: Lync Server Credentials**

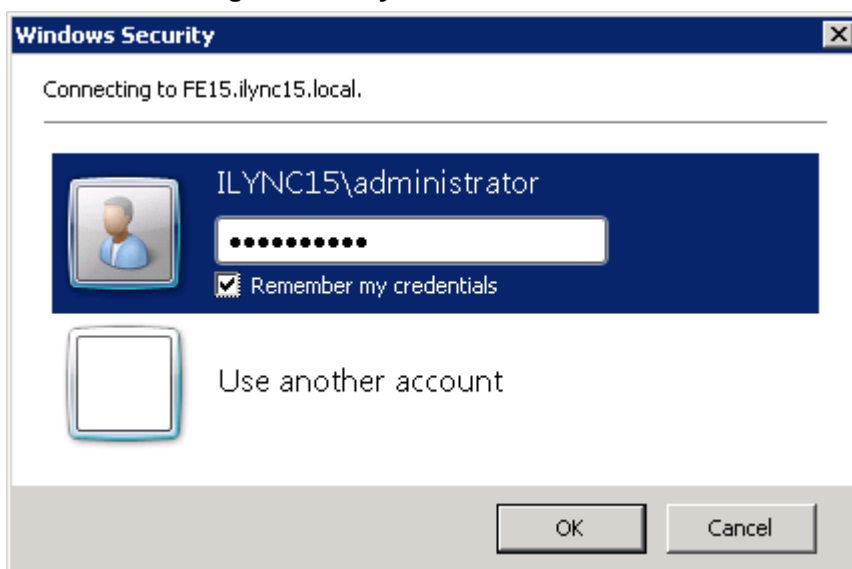

2. Enter your domain username and password, and then click **OK**; the Microsoft Lync Server 2013 Control Panel is displayed:


**Figure 3-16: Microsoft Lync Server 2013 Control Panel**

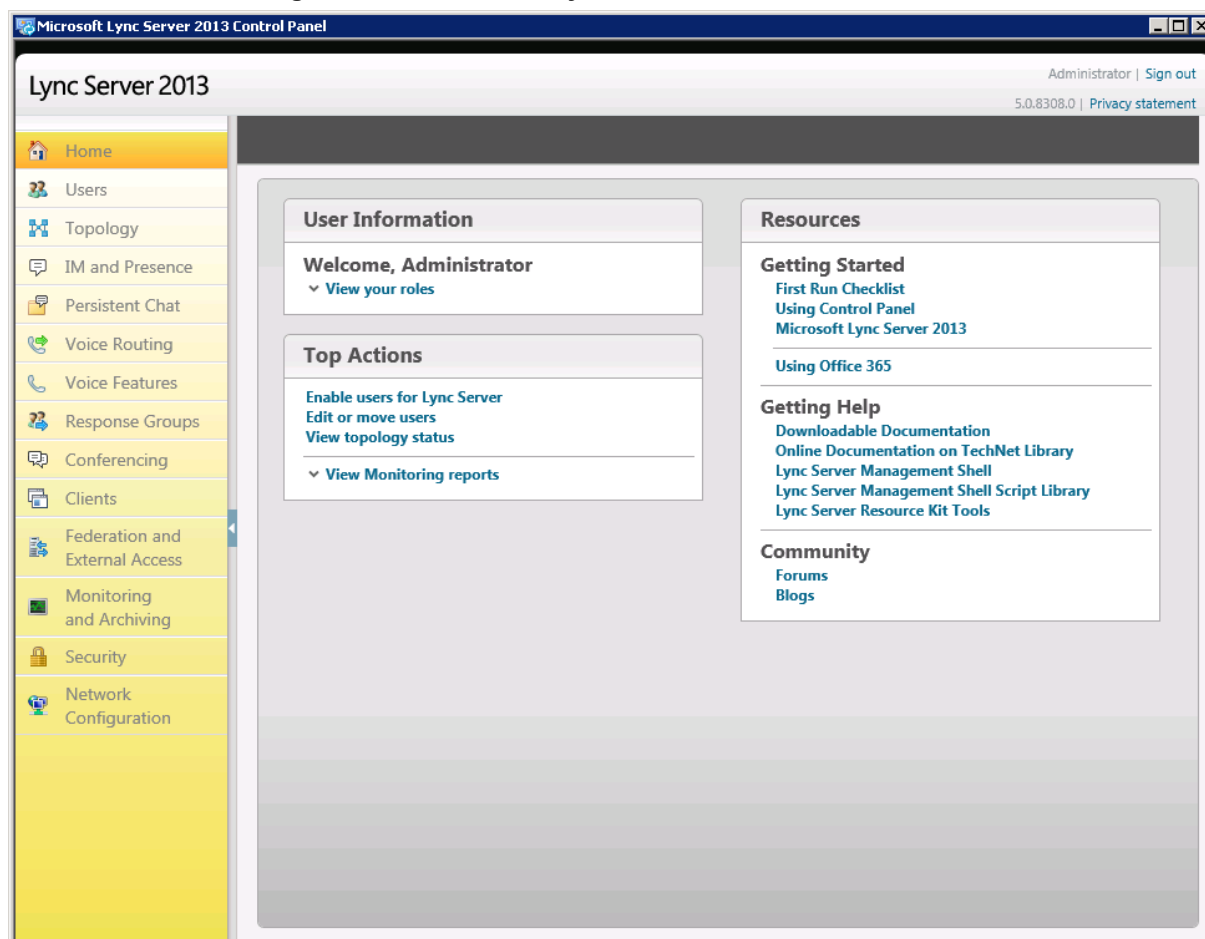




- In the left navigation pane, select **Voice Routing**.

**Figure 3-17: Voice Routing Page**

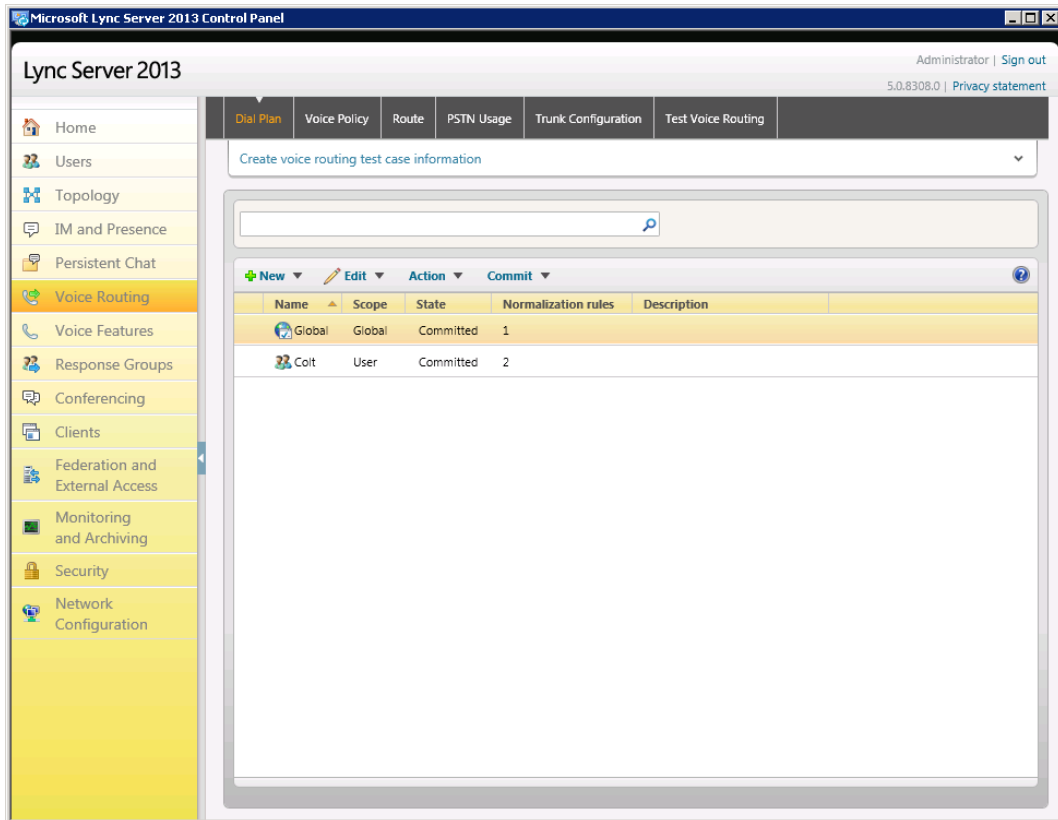

- In the Voice Routing page, select the **Route** tab.

**Figure 3-18: Route Tab**

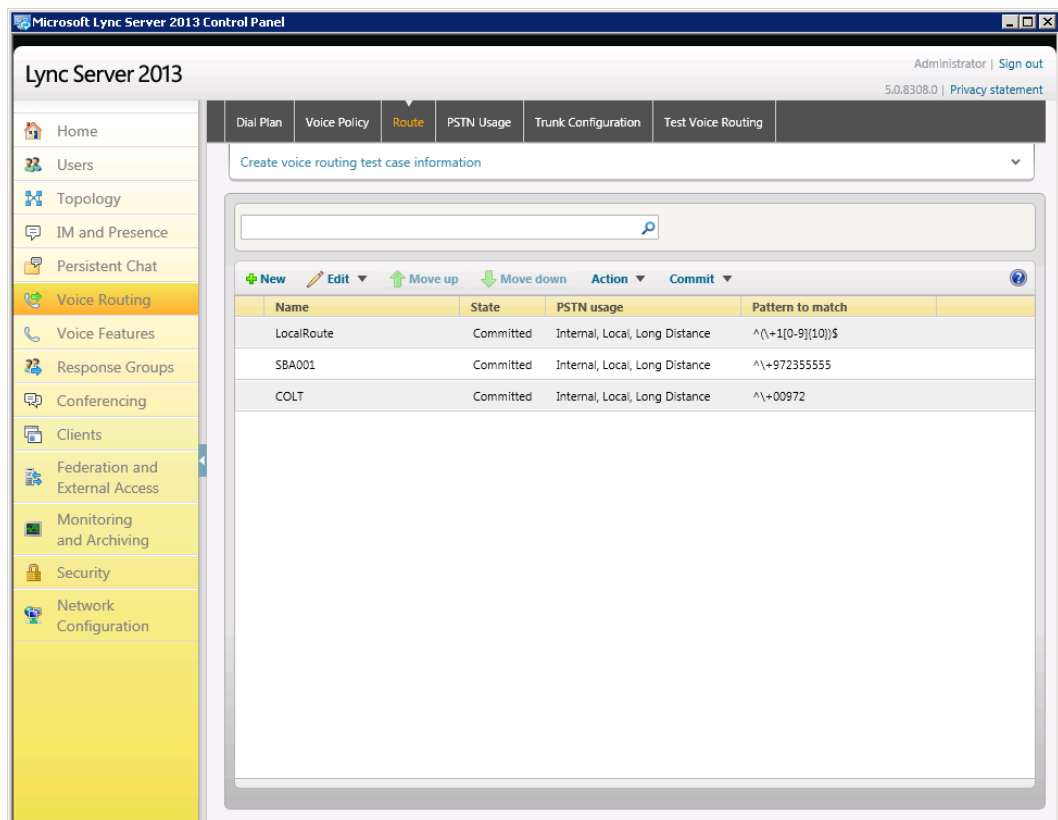

- Click **New**; the New Voice Route page appears:

**Figure 3-19: Adding New Voice Route**

The screenshot shows a 'New Voice Route' dialog box with the following fields and controls:

- Name:** SIP Trunk Route
- Description:** (empty)
- Build a Pattern to Match:**
  - Starting digits for numbers that you want to allow: \*
  - Match this pattern: ^\$
- Buttons: OK, Cancel, Add, Exceptions, Remove, Edit, Reset.

- In the 'Name' field, enter a name for this route (e.g., **SIP Trunk Route**).
- In the 'Starting digits for numbers that you want to allow' field, enter the starting digits you want this route to handle (e.g., \* to match all numbers), and then click **Add**.


**Figure 3-20: Adding New Trunk**

The screenshot shows the 'Microsoft Lync Server 2013 Control Panel' with the 'New Voice Route' dialog box open. The 'Route' tab is selected in the top navigation bar. The dialog box contains the following fields and controls:

- Name:** (empty)
- Starting digits for numbers that you want to allow:** \*
- Match this pattern:** ^\$
- Buttons:** OK, Cancel, Add, Exceptions, Remove, Edit, Reset.
- Supress caller ID:** (unchecked)
- Alternate caller ID:** (empty)
- Associated trunks:** (empty)


8. Associate the route with the E-SBC Trunk that you created:
  - a. Under the 'Associated Trunks' group, click **Add**; a list of all the deployed gateways is displayed:

**Figure 3-21: List of Deployed Trunks**

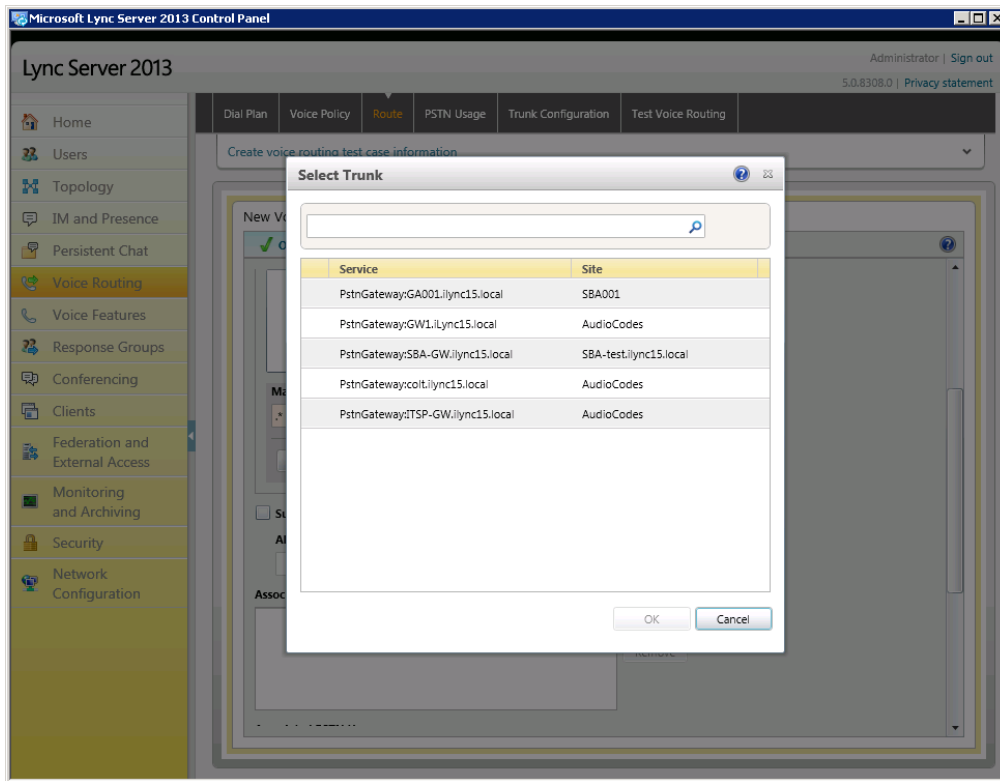


- b. Select the E-SBC Trunk you created, and then click **OK**; the trunk is added to the 'Associated Trunks' group list:

**Figure 3-22: Selected E-SBC Trunk**

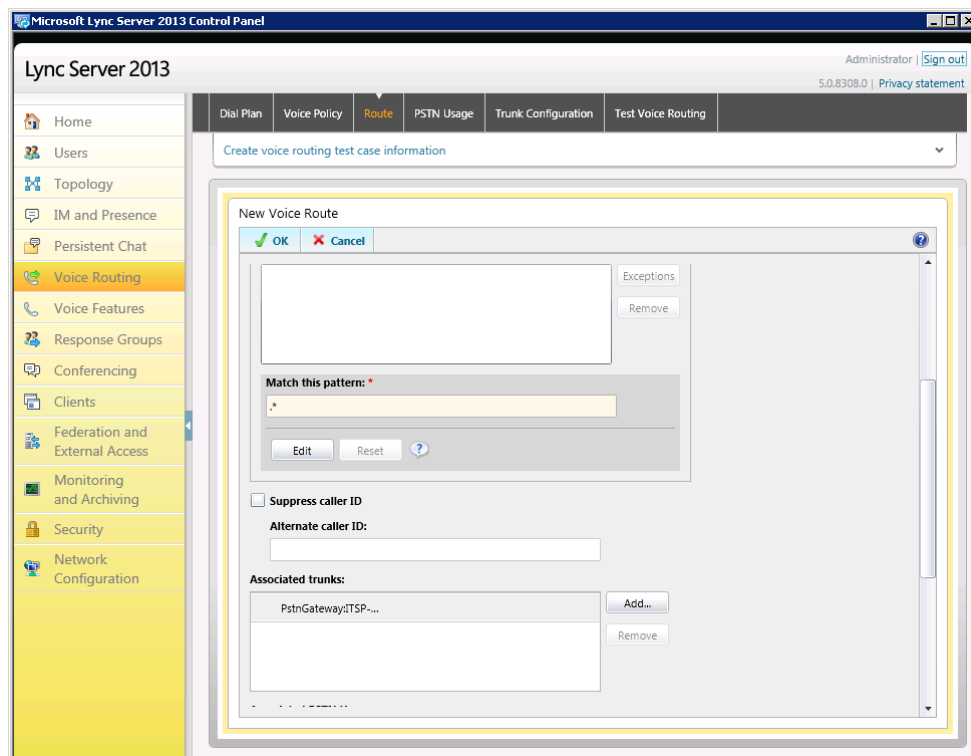


9. Associate a PSTN Usage to this route:
  - a. Under the 'Associated PSTN Usages' group, click **Select** and then add the associated PSTN Usage.

**Figure 3-23: Associating PSTN Usage to Route**

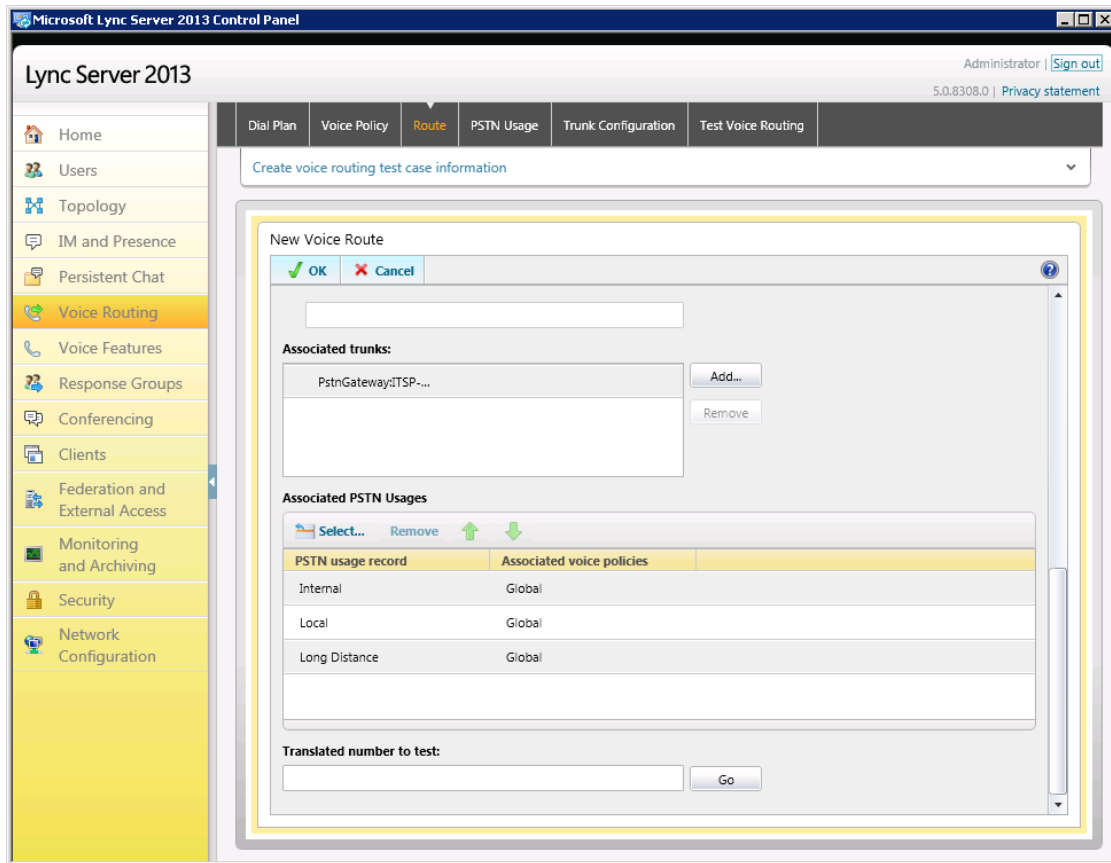


10. Click **OK** (located on the top of the New Voice Route page); the New Voice Route (Uncommitted) is displayed:

**Figure 3-24: Confirmation of New Voice Route**

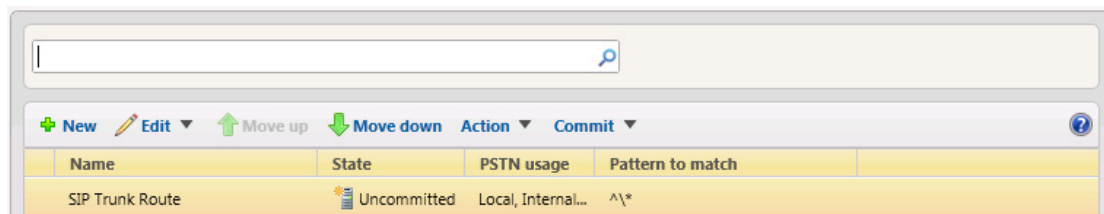


- 11. From the **Commit** drop-down list, choose **Commit all**, as shown below:

**Figure 3-25: Committing Voice Routes**

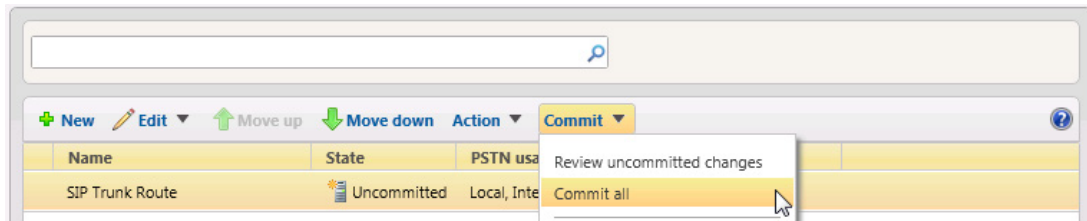


The Uncommitted Voice Configuration Settings page appears:

**Figure 3-26: Uncommitted Voice Configuration Settings**

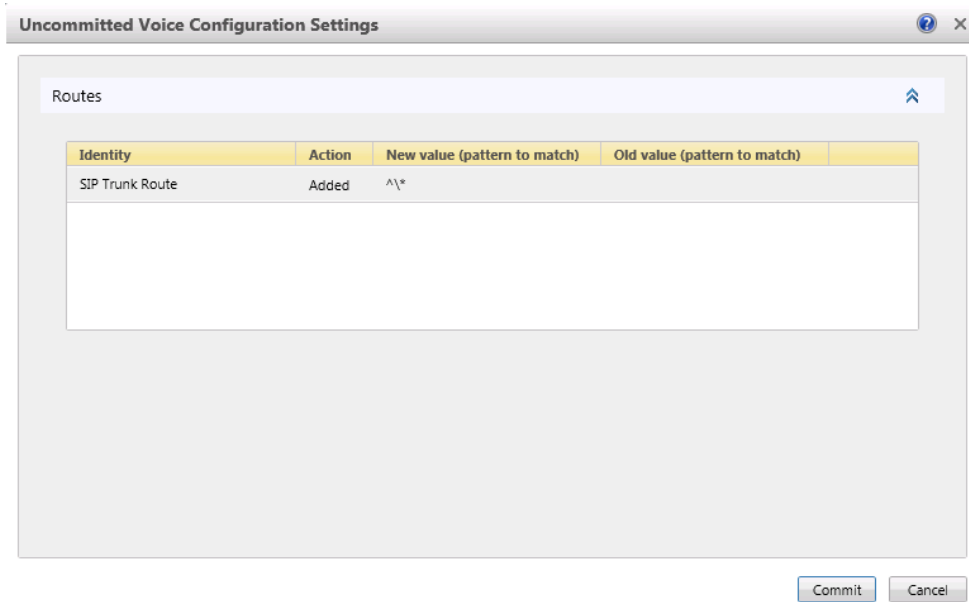


- Click **Commit**; a message is displayed confirming a successful voice routing configuration, as shown below:

**Figure 3-27: Confirmation of Successful Voice Routing Configuration**

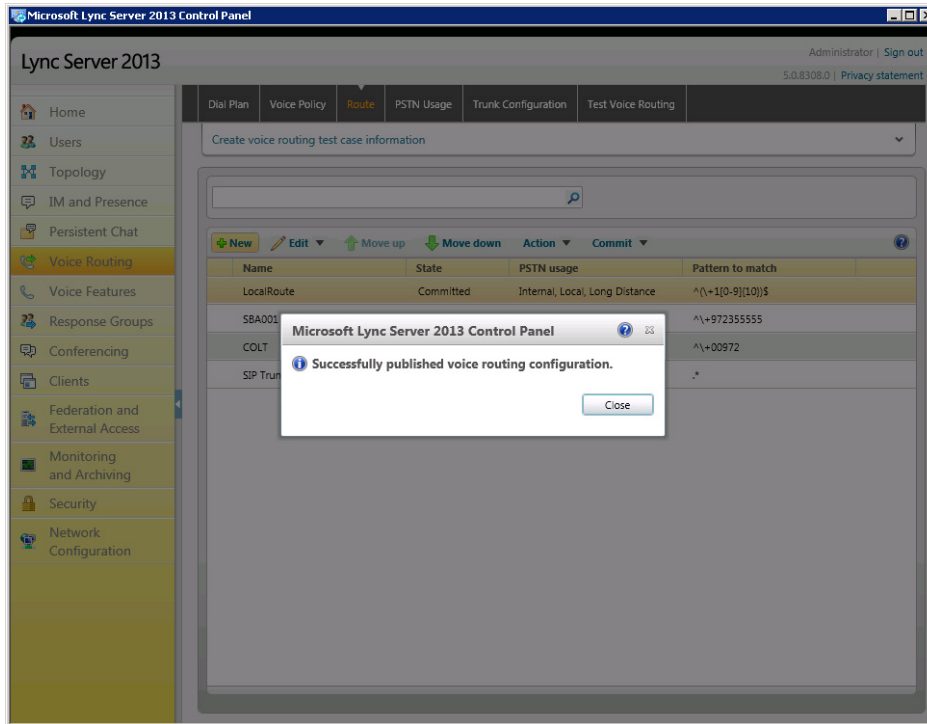

- Click **Close**; the new committed Route is displayed in the Voice Routing page, as shown below:

**Figure 3-28: Voice Routing Screen Displaying Committed Routes**

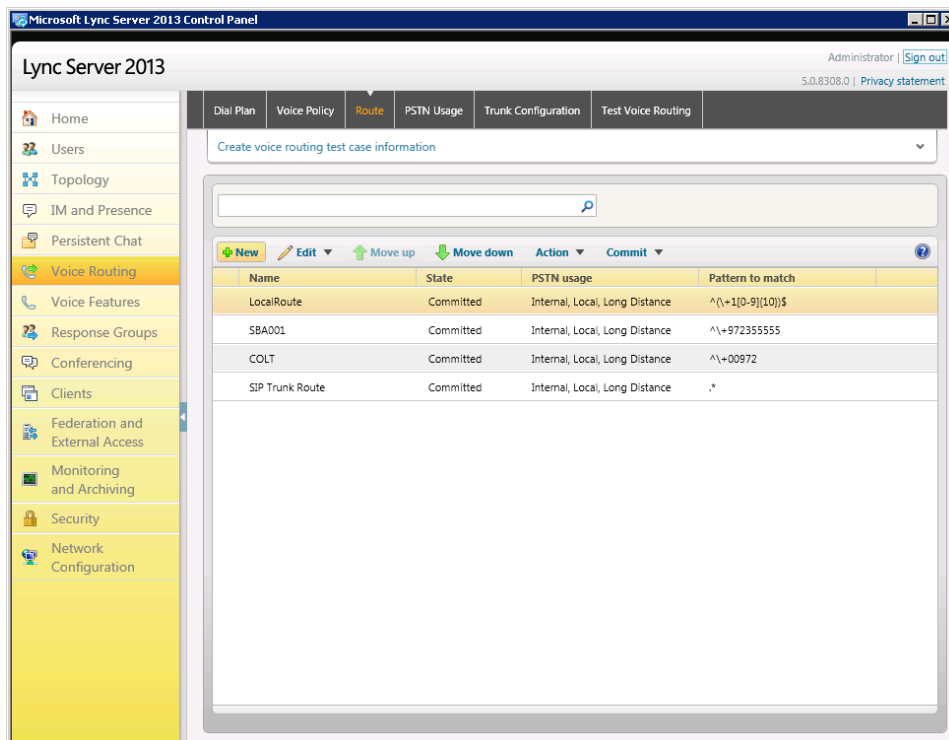

## 4 Configuring AudioCodes E-SBC

This chapter provides step-by-step procedures on how to configure AudioCodes E-SBC for interworking between Microsoft Lync Server 2013 and the Broadvox SIP Trunk. These configuration procedures are based on the interoperability test topology described in Section 2.4 on page 12, and includes the following main areas:

- E-SBC WAN interface - Broadvox SIP Trunking environment
- E-SBC LAN interface - Lync Server 2013 environment

This configuration is done using the E-SBC's embedded Web server (hereafter, referred to as *Web interface*).


### Notes:

- For implementing Microsoft Lync and Broadvox SIP Trunk based on the configuration described in this section, AudioCodes E-SBC must be installed with a Software License Key that includes the following software features:

- √ Microsoft
- √ SBC
- √ Security
- √ DSP
- √ RTP
- √ SIP

For more information about the Software License Key, contact your AudioCodes sales representative.

- The scope of this document does **not** cover security aspects for connecting the SIP Trunk to the Microsoft Lync environment. Security measures should be implemented in accordance with your organization's security policies. For basic security guidelines, refer to the *Recommended Security Guidelines* document.
- Before you begin configuring the E-SBC, ensure that the E-SBC's Web interface Navigation tree is in Full-menu display mode. To do this, select the **Full** option, as shown below:

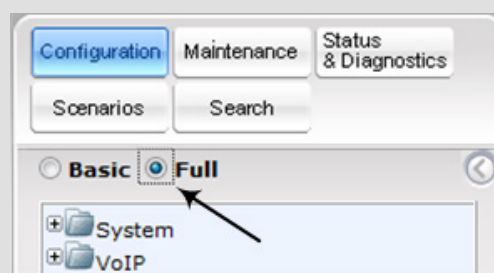

- When the E-SBC is reset, the Navigation tree reverts to the Basic-menu display.




## 4.1 Step 1: IP Network Interfaces Configuration

This step describes how to configure the E-SBC's IP network interfaces. There are several ways to deploy the E-SBC; however, this interoperability test topology employs the following deployment method:

- E-SBC interfaces with the following IP entities:
  - Lync servers, located on the LAN
  - Broadvox SIP Trunk, located on the WAN
- E-SBC connects to the WAN through a DMZ network
- Physical connection: The type of physical connection to the LAN depends on the method used to connect to the Enterprise's network. In the interoperability test topology, E-SBC connects to the LAN and WAN using dedicated LAN ports (i.e., two ports and two network cables are used).
- E-SBC also uses two logical network interfaces:
  - LAN (VLAN ID 1)
  - WAN (VLAN ID 2)

**Figure 4-1: Network Interfaces in Interoperability Test Topology**

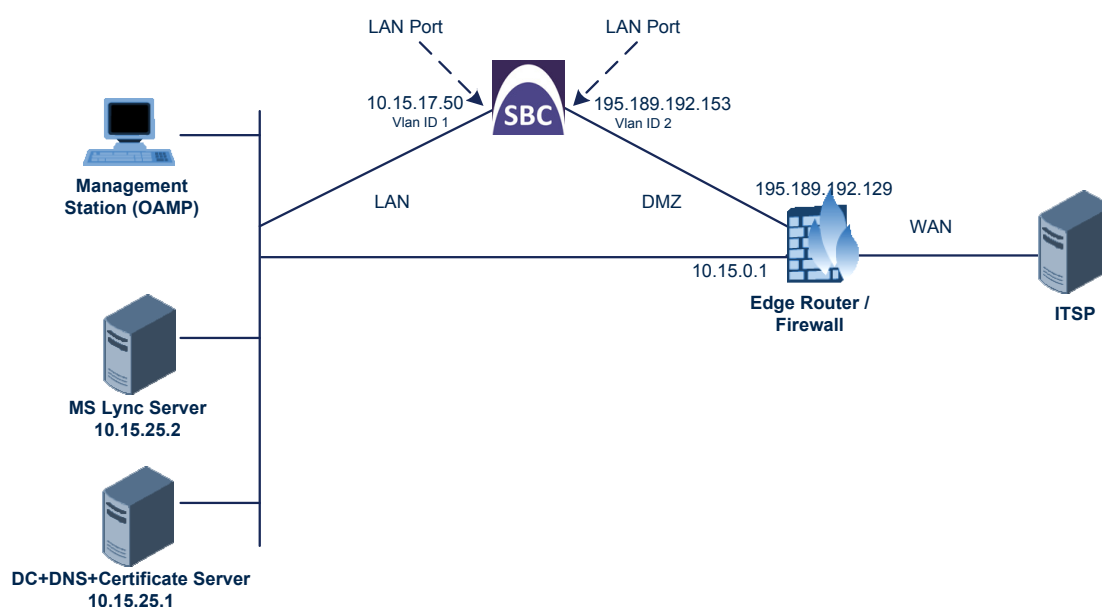



### 4.1.1 Step 1a: Configure Network Interfaces

This step describes how to configure the IP network interfaces for each of the following interfaces:

- LAN VoIP (assigned the name "Voice")
- WAN VoIP (assigned the name "WANSP")

➤ **To configure the IP network interfaces:**

1. Open the IP Interfaces Table page (**Configuration** tab > **VoIP** menu > **Network** > **IP Interfaces Table**).
2. Modify the existing LAN network interface:
  - a. Select the 'Index' radio button of the **OAMP + Media + Control** table row, and then click **Edit**.
  - b. Configure the interface as follows:

Parameter	Value
IP Address	<b>10.15.17.50</b> (IP address of E-SBC)
Prefix Length	<b>16</b> (subnet mask in bits for 255.255.0.0)
Gateway	<b>10.15.0.1</b>
VLAN ID	<b>1</b>
Interface Name	<b>Lync</b> (arbitrary descriptive name)
Primary DNS Server IP Address	<b>10.15.25.1</b>
Underlying Interface	<b>GROUP_1</b> (Ethernet port group)

3. Add a network interface for the WAN side:
  - a. Enter **1**, and then click **Add Index**.
  - b. Configure the interface as follows:

Parameter	Value
Application Type	<b>Media + Control</b>
IP Address	<b>195.189.192.157</b> (WAN IP address)
Prefix Length	<b>25</b> (for 255.255.255.128)
Gateway	<b>195.189.192.129</b> (router's IP address)
VLAN ID	<b>2</b>
Interface Name	<b>Broadvox</b>
Primary DNS Server IP Address	<b>80.179.52.100</b>
Secondary DNS Server IP Address	<b>80.179.55.100</b>
Underlying Interface	<b>GROUP_2</b>

4. Click **Apply**, and then **Done**.

The configured IP network interfaces are shown below:

**Figure 4-2: Configured Network Interfaces in IP Interfaces Table**

IP Interfaces Table									
Note: Select row index to modify the relevant row.									
<input type="text"/>		<input type="button" value="Add Index"/>		<input type="button" value="Done"/>					
Index	Application Type	Interface Mode	IP Address	Prefix Length	Gateway	VLAN ID	Interface Name	Primary DNS Server IP Address	Secondary DNS Serv IP Address
0	OAMP + Media + Control	IPv4 Manual	10.15.17.50	16	10.15.0.1	1	Lync	10.15.25.1	0.0.0.0
1	Media + Control	IPv4 Manual	195.189.192.157	25	195.189.192.129	2	Broadvox	80.179.52.100	80.179.55.100

## 4.1.2 Step 1b: Configure the Native VLAN ID

This step describes how to configure the Native VLAN ID for the LAN and WAN interfaces.

➤ **To configure the Native VLAN ID for the IP network interfaces:**

1. Open the Physical Ports Settings page (**Configuration** tab > **VoIP** menu > **Network** > **Physical Ports Table**).
2. For the **GROUP\_1** member ports, set the 'Native Vlan' field to **1**. This VLAN was assigned to network interface "Voice".
3. For the **GROUP\_2** member ports, set the 'Native Vlan' field to **2**. This VLAN was assigned to network interface "WANSP".

**Figure 4-3: Configured Port Native VLAN**

Index	Port	Mode	Native Vlan	Speed&Duplex	Description	Group Member	Group Status
1	GE_4_1	Enable	1	Auto Negotiation	User Port #0	GROUP_1	Active
2	GE_4_2	Enable	1	Auto Negotiation	User Port #1	GROUP_1	Redundant
3	GE_4_3	Enable	2	Auto Negotiation	User Port #2	GROUP_2	Active
4	GE_4_4	Enable	2	Auto Negotiation	User Port #3	GROUP_2	Redundant


## 4.2 Step 2: Enable the SBC Application

This step describes how to enable the SBC application.

➤ **To enable the SBC application:**

1. Open the Applications Enabling page (**Configuration** tab > **VoIP** menu > **Applications Enabling** > **Applications Enabling**).

**Figure 4-4: Enabling SBC Application**

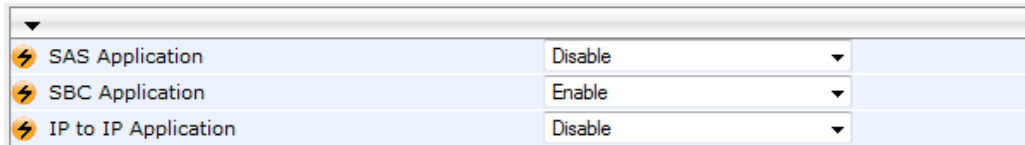

The screenshot shows a table with three rows. Each row has a lightning bolt icon on the left, followed by the application name, a drop-down menu, and a blue button on the right. The 'SBC Application' row has 'Enable' selected in the drop-down menu.

⚡ SAS Application	Disable	
⚡ SBC Application	Enable	
⚡ IP to IP Application	Disable	

2. From the 'SBC Application' drop-down list, select **Enable**.
3. Click **Submit**.
4. Reset the E-SBC with a burn to flash for this setting to take effect (see Section 4.15 on page 70).

## 4.3 Step 3: Signaling Routing Domains Configuration

This step describes how to configure Signaling Routing Domains (SRD). The SRD represents a logical VoIP network. Each logical or physical connection requires an SRD, for example, if the E-SBC interfaces with both the LAN and WAN, a different SRD would be required for each one.

The SRD is composed of the following:

- **Media Realm:** Defines a UDP port range for RTP/SRTP (media) traffic on a specific logical IP network interface of the E-SBC.
- **SIP Interface:** Defines a listening port and type (UDP, TCP, or TLS) for SIP signaling traffic on a specific logical IP network interface of the E-SBC.

### 4.3.1 Step 3a: Configure Media Realms


This step describes how to configure Media Realms. The simplest configuration is to create two Media Realms - one for internal (LAN) traffic and one for external (WAN) traffic.

➤ **To configure Media Realms:**

1. Open the Media Realm Table page (**Configuration** tab > **VoIP** menu > **Media** > **Media Realm Table**).
2. Configure a Media Realm for LAN traffic:

Parameter	Value
Index	<b>1</b>
Media Realm Name	<b>LanRealm</b> (descriptive name)
IPv4 Interface Name	<b>Lync</b>
Port Range Start	<b>6000</b> (represents lowest UDP port number used for media on LAN)
Number of Media Session Legs	<b>10</b> (media sessions assigned with port range)

**Figure 4-5: Configuring Media Realm for LAN**

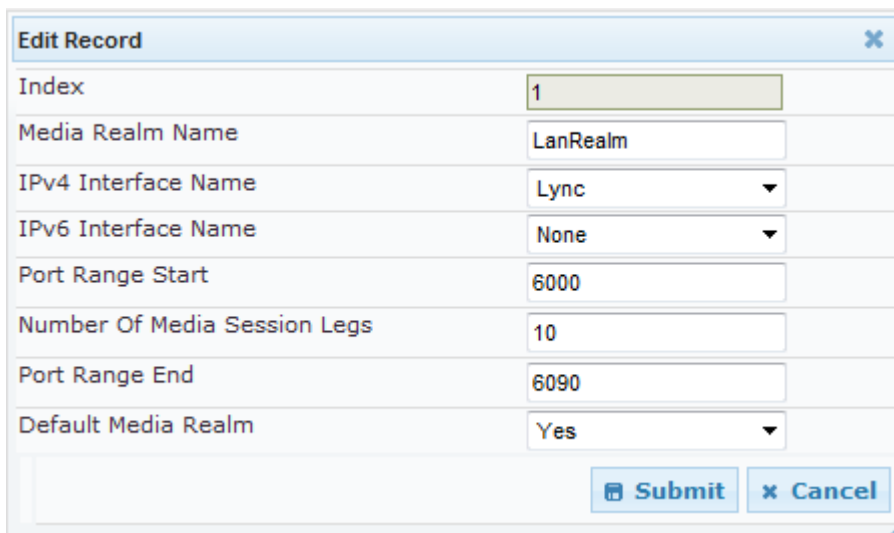

Edit Record	
Index	1
Media Realm Name	LanRealm
IPv4 Interface Name	Lync
IPv6 Interface Name	None
Port Range Start	6000
Number Of Media Session Legs	10
Port Range End	6090
Default Media Realm	Yes
<input type="button" value="Submit"/> <input type="button" value="Cancel"/>	

- Configure a Media Realm for WAN traffic:

Parameter	Value
Index	<b>2</b>
Media Realm Name	<b>WanRealm</b> (arbitrary name)
IPv4 Interface Name	<b>Broadvox</b>
Port Range Start	<b>7000</b> (represents lowest UDP port number used for media on WAN)
Number of Media Session Legs	<b>10</b> (media sessions assigned with port range)

**Figure 4-6: Configuring Media Realm for WAN**

The configured Media Realms are shown in the figure below:

**Figure 4-7: Configured Media Realms in Media Realm Table**

Media Realm Table			
Index	Media Realm Name	IPv4 Interface Name	IPv6 Interface Name
1	LanRealm	Lync	None
2	WanRealm	Broadvox	None

Page 1 of 1 Show 10 records per page View 1 - 2 of 2

### 4.3.2 Step 3b: Configure SRDs


This step describes how to configure the SRDs.

➤ **To configure SRDs:**

1. Open the SRD Settings page (**Configuration** tab > **VoIP** menu > **Control Network** > **SRD Table**).
2. Configure an SRD for the E-SBC's internal interface (toward Lync Server 2013):

Parameter	Value
SRD Index	<b>1</b>
SRD Name	<b>SRDLan</b> (descriptive name for SRD)
Media Realm	<b>LanRealm</b> (associates SRD with Media Realm)

**Figure 4-8: Configuring LAN SRD**

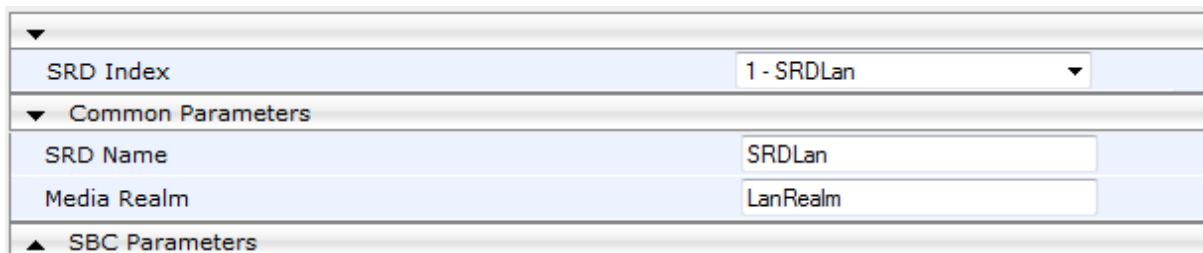


SRD Index	1 - SRDLan
Common Parameters	
SRD Name	SRDLan
Media Realm	LanRealm
SBC Parameters	

3. Configure an SRD for the E-SBC's external interface (toward the Broadvox SIP Trunk):

Parameter	Value
SRD Index	<b>2</b>
SRD Name	<b>SRDWan</b>
Media Realm	<b>WanRealm</b>

**Figure 4-9: Configuring WAN SRD**

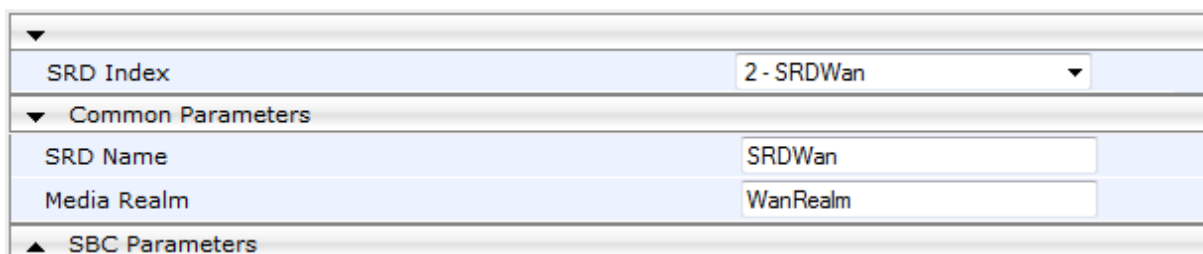

SRD Index	2 - SRDWan
Common Parameters	
SRD Name	SRDWan
Media Realm	WanRealm
SBC Parameters	

### 4.3.3 Step 3c: Configure SIP Signaling Interfaces

This step describes how to configure SIP Interfaces. For the interoperability test topology, an internal and external SIP Interface must be configured for the E-SBC.

➤ **To configure SIP Interfaces:**

1. Open the SIP Interface Table page (**Configuration** tab > **VoIP** menu > **Control Network** > **SIP Interface Table**).
2. Configure a SIP interface for the LAN:

Parameter	Value
Index	1
Network Interface	Lync
Application Type	SBC
TCP and UDP	0
TLS Port	5067
SRD	1

3. Configure a SIP interface for the WAN:

Parameter	Value
Index	2
Network Interface	Broadvox
Application Type	SBC
UDP and TCP Port	5060
TLS	0
SRD	2

The configured SIP Interfaces are shown in the figure below:

**Figure 4-10: Configured SIP Interfaces in SIP Interface Table**

Index	Network Interface	Application Type	UDP Port	TCP Port	TLS Port	SRD	Message Policy
1	Lync	SBC	0	0	5067	1	None
2	Broadvox	SBC	5060	0	0	2	None

Page 1 of 1 Show 10 records per page View 1 - 2 of 2

## 4.4 Step 4: Configure Proxy Sets

This step describes how to configure Proxy Sets. The Proxy Set defines the destination address (IP address or FQDN) of the IP entity server. Proxy Sets can also be used to configure load balancing between multiple servers.

For the interoperability test topology, two Proxy Sets need to be configured for the following IP entities:

- Microsoft Lync Server 2013
- Broadvox SIP Trunk


These Proxy Sets will later be associated with IP Groups.

### ➤ To configure Proxy Sets:

1. Open the Proxy Sets Table page (**Configuration** tab > **VoIP** menu > **Control Network** > **Proxy Sets Table**).
2. Configure a Proxy Set for Lync Server 2013:

Parameter	Value
Proxy Set ID	1
Proxy Address	<b>FE15.ilync15.local:5067</b> (Lync Server 2013 IP address / FQDN and destination port)
Transport Type	<b>TLS</b>
Enable Proxy Keep Alive	<b>Using Options</b>
Proxy Load Balancing Method	<b>Round Robin</b>
Is Proxy Hot Swap	<b>Yes</b>
SRD Index	1

**Figure 4-11: Configuring Proxy Set for Microsoft Lync Server 2013**

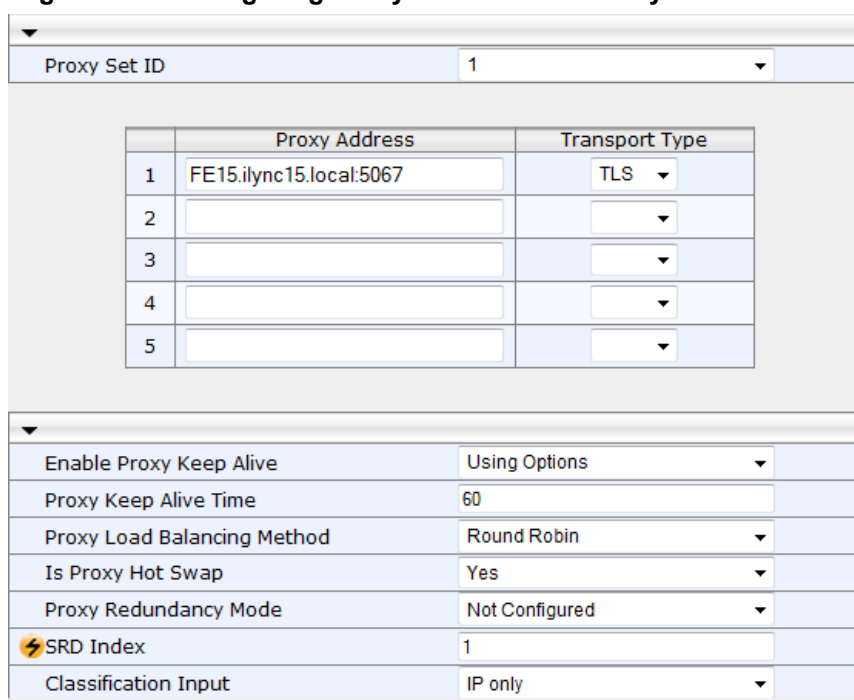

The screenshot shows the configuration interface for a Proxy Set. At the top, there is a dropdown menu for 'Proxy Set ID' with the value '1'. Below this is a table with two columns: 'Proxy Address' and 'Transport Type'. The first row of the table has the value 'FE15.ilync15.local:5067' in the 'Proxy Address' column and 'TLS' in the 'Transport Type' column. There are five rows in total, with the first row populated and the others empty. Below the table, there is a list of configuration parameters, each with a dropdown menu:

- Enable Proxy Keep Alive: Using Options
- Proxy Keep Alive Time: 60
- Proxy Load Balancing Method: Round Robin
- Is Proxy Hot Swap: Yes
- Proxy Redundancy Mode: Not Configured
- SRD Index: 1
- Classification Input: IP only



- Configure a Proxy Set for the Broadvox SIP Trunk:

Parameter	Value
Proxy Set ID	<b>2</b>
Proxy Address	<b>dn01-05.fs.broadvox.net</b> (Broadvox IP address / FQDN)
Transport Type	<b>UDP</b>
Enable Proxy Keep Alive	<b>Using Options</b>
Is Proxy Hot Swap	<b>Yes</b>
SRD Index	<b>2</b> (enables classification by Proxy Set for SRD of IP Group belonging to Broadvox SIP Trunk)

**Figure 4-12: Configuring Proxy Set for Broadvox SIP Trunk**

	Proxy Address	Transport Type
1	dn01-05.fs.broadvox.net	UDP ▼
2		▼
3		▼
4		▼
5		▼

Enable Proxy Keep Alive	Using Options ▼
Proxy Keep Alive Time	60
Proxy Load Balancing Method	Disable ▼
Is Proxy Hot Swap	Yes ▼
Proxy Redundancy Mode	Not Configured ▼
⚡ SRD Index	2
Classification Input	IP only ▼

- Reset the E-SBC with a burn to flash for these settings to take effect (see Section 4.15 on page 70).

## 4.5 Step 5: Configure IP Groups

This step describes how to configure IP Groups. The IP Group represents an IP entity on the network with which the E-SBC communicates. This can be a server (e.g., IP PBX or ITSP) or it can be a group of users (e.g., LAN IP phones). For servers, the IP Group is typically used to define the server's IP address by associating it with a Proxy Set. A typical deployment consists of multiple IP Groups associated with the same SRD. For example, you can have two LAN IP PBXs sharing the same SRD, and two ITSPs / SIP Trunks sharing the same SRD. Once IP Groups are configured, they are used to configure IP-to-IP routing rules for denoting source and destination of the call.

In this interoperability test topology, IP Groups must be configured for the following IP entities:

- Lync Server 2013 (Mediation Server) located on LAN
- Broadvox SIP Trunk located on WAN

➤ **To configure IP Groups:**

1. Open the IP Group Table page (**Configuration** tab > **VoIP** menu > **Control Network** > **IP Group Table**).
2. Configure an IP Group for the Lync Server 2013 Mediation Server:

Parameter	Value
Index	<b>1</b>
Type	<b>Server</b>
Description	<b>Lync</b> (arbitrary descriptive name)
Proxy Set ID	<b>1</b>
SIP Group Name	
SRD	<b>1</b>
Media Realm Name	<b>LanRealm</b>
IP Profile ID	<b>1</b>

3. Configure an IP Group for the Broadvox SIP Trunk:

Parameter	Value
Index	<b>2</b>
Type	<b>Server</b>
Description	<b>Broadvox</b> (arbitrary descriptive name)
Proxy Set ID	<b>2</b>
SIP Group Name	<b>broadvox.net</b>
SRD	<b>2</b>
Media Realm Name	<b>WanRealm</b>
IP Profile ID	<b>2</b>

The configured IP Groups are shown in the figure below:

**Figure 4-13: Configured IP Groups in IP Group Table**

IP Group Table									
Add +									
Index	Type	Description	Proxy Set ID	SIP Group Name	Contact User	Local Host Name	SRD	Media Realm Name	IP Profile ID
1	Server	Lync	1				1	LanRealm	1
2	Server	Broadvox	2	broadvox.net			2	WanRealm	2

<< << Page 1 of 1 >> >> Show 10 records per page View 1 - 2 of 2

## 4.6 Step 6: Configure IP Profiles

This step describes how to configure IP Profiles. The IP Profile defines a set of call capabilities relating to signaling (e.g., SIP message terminations such as REFER) and media (e.g., coder and transcoding method).

In this interoperability test topology, IP Profiles need to be configured for the following IP entities:

- Microsoft Lync Server 2013 - to operate in secure mode using SRTP and TLS
- Broadvox SIP trunk - to operate in non-secure mode using RTP and UDP

Note that the IP Profiles were assigned to these entities (i.e., IP Groups) in the previous step (see Section 4.5 on page 42).

➤ **To configure IP Profiles:**

1. Open the IP Profile Settings page (**Configuration** tab > **VoIP** > **Coders and Profiles** > **IP Profile Settings**).
2. Configure an IP Profile for Lync Server 2013:

Parameter	Value
Profile ID	<b>1</b>
Media Security Behavior	<b>SRTP</b>
SBC Session Expires Mode	<b>Supported</b>
SBC Remote Early Media RTP	<b>Delayed</b> (required, as Lync Server 2013 does not send RTP immediately to remote side when it sends a SIP 18x response)
SBC Remote Update Support	<b>Supported Only After Connect</b>
SBC Remote Re-Invite Support	<b>Supported Only With SDP</b>
SBC Remote REFER Behavior	<b>Handle Locally</b> (required, as Lync Server 2013 does not support receipt of SIP REFER)
SBC Remote 3xx Behavior	<b>Handle Locally</b> (required, as Lync Server 2013 does not support receipt of SIP 3xx responses)
SBC Remote Delayed Offer Support	<b>Not Supported</b>
SBC PRACK Mode	<b>Optional</b> (required, as Broadvox does not support PRACK)

Reset SRTP State Upon Rekey	<p><b>Enable</b></p> <p><b>Note:</b> Currently, you cannot configure this parameter through the Web-based management tool. As an alternative, use the <i>ini</i> configuration file, as follows:</p> <ol style="list-style-type: none"><li>1 When you have completed <b>all</b> configurations, save the configuration to an INI file (see <a href="#">Appendix A</a> on page <a href="#">71Appendix A</a>).</li><li>2 Open the file and search for "IpProfile 1".</li><li>3 For this IP Profile, set the <i>IpProfile_ResetSRTPStateUponRekey</i> parameter to "1". This value is located sixth from the end of the line (i.e., semicolon): "1, 0, 1, 0, 3, 0;"</li><li>4 Save the file and load it to the device.</li></ol>
-----------------------------	---

Figure 4-14: Configuring IP Profile for Lync Server 2013

▼		
→	Profile ID	1 ▼
	Profile Name	Lync
▲ Common Parameters		
* Gateway Parameters		
▼ SBC		
	Transcoding Mode	Only if Required ▼
	Extension Coders Group ID	None ▼
	Allowed Coders Group ID	None ▼
	Allowed Coders Mode	Restriction ▼
	Diversion Mode	Don't Care ▼
	History Info Mode	Don't Care ▼
→	Media Security Behavior	SRTP ▼
	RFC 2833 Behavior	As Is ▼
	Alternative DTMF Method	Don't Care ▼
	P-Asserted-Identity	Don't Care ▼
	SBC Fax Coders Group ID	None ▼
	SBC Fax Behavior	0
	SBC Fax Offer Mode	0
	SBC Fax Answer Mode	1
→	SBC Session Expires Mode	Supported ▼
→	SBC Remote Early Media RTP	Delayed ▼
	SBC Remote Can Play Ringback	Yes ▼
	SBC Remote Supports RFC 3960	Not Supported ▼
	SBC Multiple 18x Support	supported ▼
	SBC Early Media Response Type	Transparent ▼
→	SBC Remote Update Support	Supported Only After Connect ▼
→	SBC Remote Re-Invite Support	Supported only with SDP ▼
→	SBC Remote REFER Behavior	Handle Locally ▼
→	SBC Remote Early Media Support	supported ▼
→	SBC Remote 3xx Behavior	Handle Locally ▼
→	SBC Remote Delayed Offer Support	Not Supported ▼
→	SBC PRACK Mode	Optional ▼
	SBC Enforce MKI Size	do-not-enforce ▼
	SBC User Registration Time	-1
	SBC Remote Hold Format	transparent ▼

**3.** Configure an IP Profile for the Broadvox SIP Trunk:

<b>Parameter</b>	<b>Value</b>
Profile ID	<b>2</b>
Transcoding Mode	<b>Force</b> (required, as Broadvox does not send RTCP packets)
Extension Coders Group ID	<b>Coders Group 2</b>
Allowed Coders Group ID	<b>Coders Group 2</b>
Allowed Coders Mode	<b>Preference</b> (lists Allowed Coders first and then original coders in received SDP offer)
Media Security Behavior	<b>RTP</b>
SBC Remote Can Play Ringback	<b>No</b> (required, as Lync Server 2013 does not provide a ringback tone for incoming calls)
SBC Remote Refer Behavior	<b>Handle Locally</b> (E-SBC handles / terminates incoming REFER requests instead of forwarding them to SIP Trunk)

Figure 4-15: Configuring IP Profile for Broadvox SIP Trunk

▼	Profile ID	2
	Profile Name	Broadvox
▲ Common Parameters		
* Gateway Parameters		
▼	SBC	
→	Transcoding Mode	Force
→	Extension Coders Group ID	Coders Group 2
→	Allowed Coders Group ID	Coders Group 2
→	Allowed Coders Mode	Preference
	Diversion Mode	Don't Care
	History Info Mode	Don't Care
→	Media Security Behavior	RTP
	RFC 2833 Behavior	As Is
	Alternative DTMF Method	Don't Care
	P-Asserted-Identity	Don't Care
	SBC Fax Coders Group ID	None
	SBC Fax Behavior	0
	SBC Fax Offer Mode	0
	SBC Fax Answer Mode	1
	SBC Session Expires Mode	Transparent
	SBC Remote Early Media RTP	Immediate
→	SBC Remote Can Play Ringback	No
	SBC Remote Supports RFC 3960	Not Supported
	SBC Multiple 18x Support	supported
	SBC Early Media Response Type	Transparent
	SBC Remote Update Support	Supported
	SBC Remote Re-Invite Support	Supported
→	SBC Remote REFER Behavior	Handle Locally
	SBC Remote Early Media Support	supported
	SBC Remote 3xx Behavior	Transparent
	SBC Remote Delayed Offer Support	Supported
	SBC PRACK Mode	Transparent
	SBC Enforce MKI Size	do-not-enforce
	SBC User Registration Time	-1
	SBC Remote Hold Format	transparent



## 4.7 Step 7: Configure Coders

This step describes how to configure coders (termed *Coder Group*). As Lync Server 2013 supports the G.711 coder while the network connection to Broadvox SIP Trunk may restrict operation with a lower bandwidth coder such as G.729, you need to add a Coder Group with the G.729 coder for the Broadvox SIP Trunk.

Note that the Coder Group ID for this entity was assigned to its corresponding IP Profile in the previous step (see Section 4.6 on page 44).

➤ **To configure coders:**

1. Open the Coder Group Settings (**Configuration** tab > **VoIP** menu > **Coders and Profiles** > **Coders Group Settings**).
2. Configure a Coder Group for Broadvox SIP Trunk:

Parameter	Value
Coder Group ID	2
Coder Name	G.729

**Figure 4-16: Configuring Coder Group for Broadvox SIP Trunk**


Coder Group ID: 2				
Coder Name	Packetization Time	Rate	Payload Type	Silence Suppression
G.729	20	8	18	Disabled

The procedure below describes how to configure an Allowed Coders Group to ensure that voice sent to the Broadvox SIP Trunk uses the G.729 coder whenever possible. Note that this Allowed Coders Group ID was assigned to the IP Profile belonging to the Broadvox SIP Trunk in the previous step (see Section 4.6 on page 44).

➤ **To set a preferred coder for the Broadvox SIP Trunk:**

1. Open the Allowed Coders Group page (**Configuration** tab > **VoIP** menu > **SBC** > **Allowed Coders Group**).
2. Configure an Allowed Coder as follows:

Parameter	Value
Allowed Coders Group ID	2
Coder Name	G.729

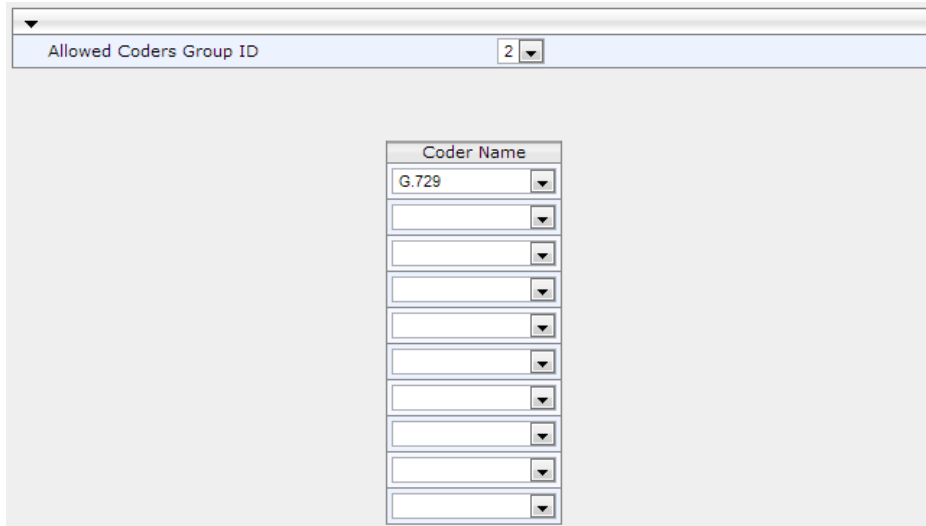
**Figure 4-17: Configuring Allowed Coders Group for Broadvox SIP Trunk**


Allowed Coders Group ID
2

Coder Name
G.729

3. Open the General Settings page (**Configuration** tab > **VoIP** menu > **SBC** > **General Settings**).

**Figure 4-18: SBC Preferences Mode**

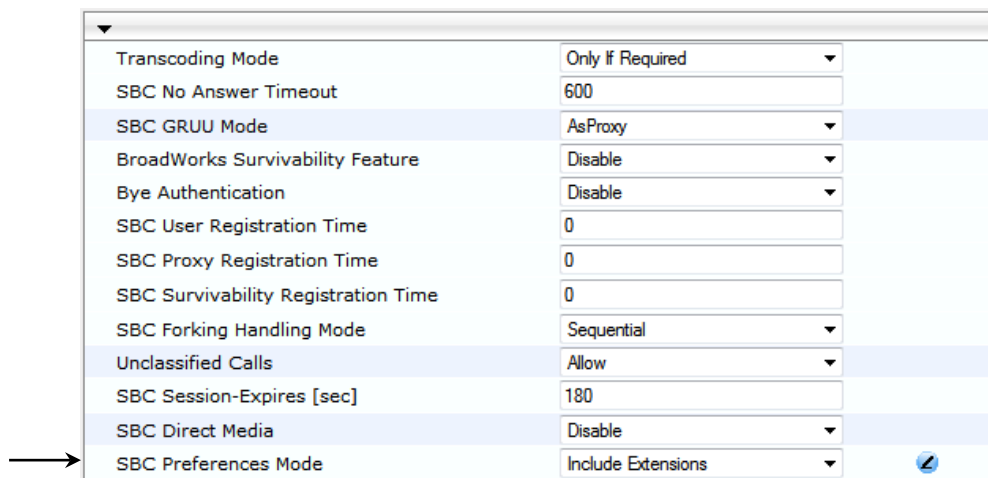
Transcoding Mode	Only If Required
SBC No Answer Timeout	600
SBC GRUU Mode	AsProxy
BroadWorks Survivability Feature	Disable
Bye Authentication	Disable
SBC User Registration Time	0
SBC Proxy Registration Time	0
SBC Survivability Registration Time	0
SBC Forking Handling Mode	Sequential
Unclassified Calls	Allow
SBC Session-Expires [sec]	180
SBC Direct Media	Disable
SBC Preferences Mode	Include Extensions

4. From the 'SBC Preferences Mode' drop-down list, select **Include Extensions**.
5. Click **Submit**.

## 4.8 Step 8: SIP TLS Connection Configuration

This section describes how to configure the E-SBC for using a TLS connection with the Lync Server 2013 Mediation Server. This is essential for a secure SIP TLS connection.


### 4.8.1 Step 8a: Configure the NTP Server Address

This step describes how to configure the NTP server's IP address. It is recommended to implement an NTP server (Microsoft NTP server or a third-party server) to ensure that the E-SBC receives the accurate and current date and time. This is necessary for validating certificates of remote parties.

➤ **To configure the NTP server address:**

1. Open the Application Settings page (**Configuration** tab > **System** > **Application Settings**).
2. In the 'NTP Server IP Address' field, enter the IP address of the NTP server (e.g., **10.15.25.1**).

**Figure 4-19: Configuring NTP Server Address**

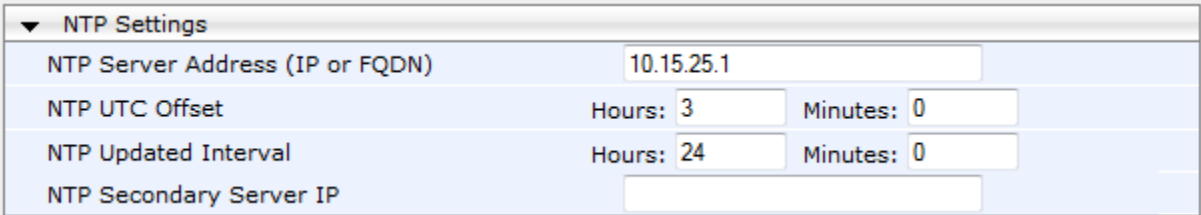

NTP Settings	
NTP Server Address (IP or FQDN)	10.15.25.1
NTP UTC Offset	Hours: 3 Minutes: 0
NTP Updated Interval	Hours: 24 Minutes: 0
NTP Secondary Server IP	

3. Click **Submit**.

## 4.8.2 Step 8b: Configure a Certificate

This step describes how to exchange a certificate with Microsoft Certificate Authority (CA). The certificate is used by the E-SBC to authenticate the connection with Lync Server 2013.

The procedure involves the following main steps:

- a. Generating a Certificate Signing Request (CSR).
- b. Requesting Device Certificate from CA.
- c. Obtaining Trusted Root Certificate from CA.
- d. Deploying Device and Trusted Root Certificates on E-SBC.

➤ **To configure a certificate:**

1. Open the Certificates page (**Configuration** tab > **System** > **Certificates**).

**Figure 4-20: Certificates Page - Creating CSR**

Certificate Signing Request	
Subject Name [CN]	<input type="text" value="ITSP-GW.ilync15.local"/>
Organizational Unit [OU] (optional)	<input type="text"/>
Company name [O] (optional)	<input type="text"/>
Locality or city name [L] (optional)	<input type="text"/>
State [ST] (optional)	<input type="text"/>
Country code [C] (optional)	<input type="text"/>
<input type="button" value="Create CSR"/>	
After creating the CSR, copy the text below (including the BEGIN/END lines) and send it to your Certification Authority for signing.	
<pre> -----BEGIN CERTIFICATE REQUEST----- MIIBXzCBYQIBADAgMR4wHAYDVQQDExVJVFNFQlUdXLMlseW5jMTUubG9jYWwz8w DQYJKoZIhvcNAQEBBQADgY0AMIGJAoGBAKkobC9QmE0XA0vaTrki0on0LVrwNsC1 3TMgncMVxdp9/BCKyypgT2W1vz0NGUsypa7w2DKKkxr8xA9sGLXwy0ZCyB49U1pDF DJV8I1dUfT8qL9d9V64f3z004I1hweZSn4hHdAfGy0S6e91JhFw/USUD6/bNygQz 5Z203jtjXKmdAgMBAAAgADANBgkqhkiG9w0BAQQFAAOBgqBLqe880JGrmEzFu5Q1 pRgiOuEQ4Fr6PL+JKghi16UpLmHEwixTedayzNh7b2yQgFYxiVWmX2JwrvXaCp5Y 8z8hOCZXV/E4MrR2s8Yb6bqxeteAXs+VwxgKObb4pSFfGLc82+dZUcODAB0wZFv nxSEcPACKnZittF/GgW+A4AoMQ== -----END CERTIFICATE REQUEST-----                     </pre>	

2. In the 'Subject Name' field, enter the media gateway name (e.g., **ITSP-GW.ilync15.local**).




**Note:** The value entered in this field must be identical to the gateway name configured in the Topology Builder for Lync Server 2013 (see Section 3.1 on page 15).

3. Click **Create CSR**; a certificate request is generated.
4. Copy the CSR from the line "**-----BEGIN CERTIFICATE**" to "**END CERTIFICATE REQUEST-----**" to a text file (such as Notepad), and then save it to a folder on your computer with the file name, *certreq.txt*.


5. Open a Web browser and navigate to the Microsoft Certificates Services Web site at <http://<certificate server>/CertSrv>.

**Figure 4-21: Microsoft Certificate Services Web Page**

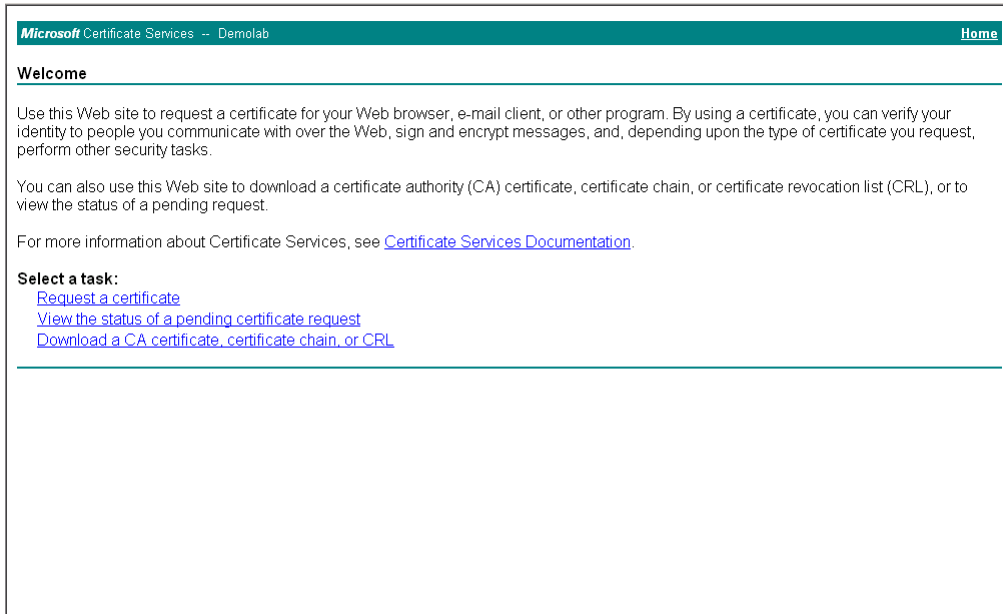

6. Click **Request a certificate**.

**Figure 4-22: Request a Certificate Page**

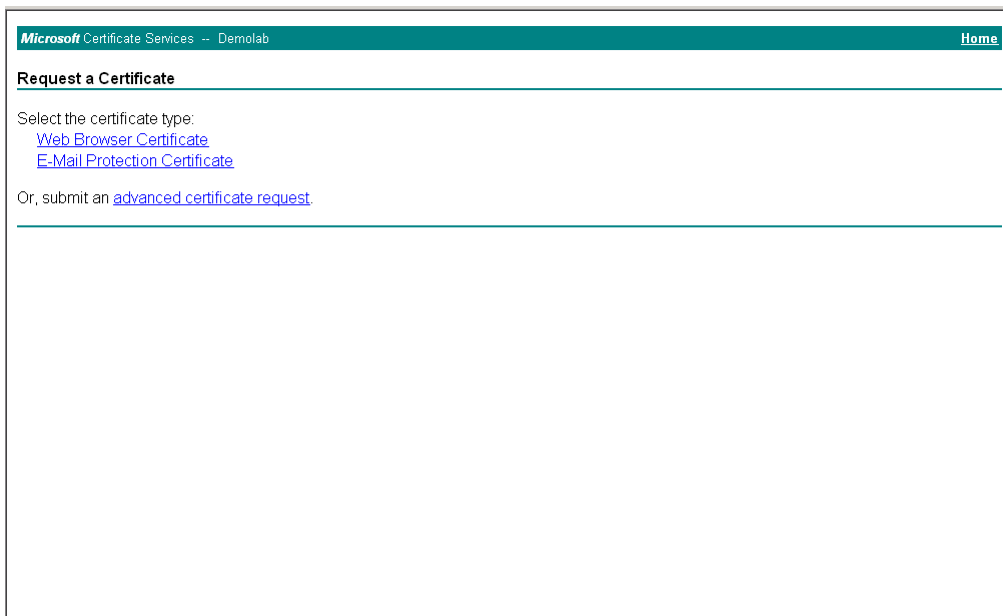

- Click **advanced certificate request** and then click **Next**.


**Figure 4-23: Advanced Certificate Request Page**

- Click **Submit a certificate request ...**, and then click **Next**.

**Figure 4-24: Submit a Certificate Request or Renewal Request Page**


- Open the *certreq.txt* file that you created and saved in Step 4, and then copy its contents to the 'Saved Request' field.
- From the 'Certificate Template' drop-down list, select **Web Server**.
- Click **Submit**.

Figure 4-25: Certificate Issued Page

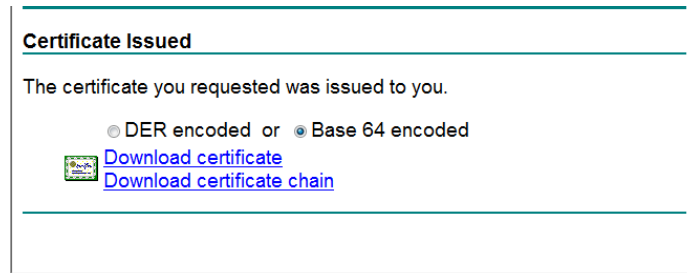

12. Select the **Base 64 encoded** option for encoding, and then click **Download certificate**.
13. Save the file as *gateway.cer* to a folder on your computer.
14. Click the **Home** button or navigate to the certificate server at <http://<Certificate Server>/CertSrv>.
15. Click **Download a CA certificate, certificate chain, or CRL**.

Figure 4-26: Download a CA Certificate, Certificate Chain, or CRL Page

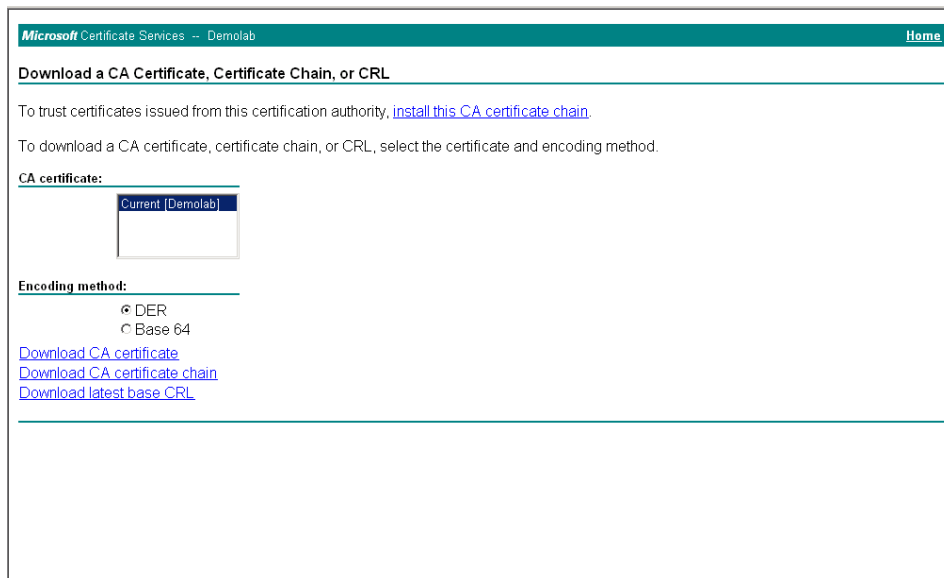

16. Under the 'Encoding method' group, select the **Base 64** option for encoding.
17. Click **Download CA certificate**.
18. Save the file as *certroot.cer* to a folder on your computer.
19. In the E-SBC's Web interface, return to the Certificates page and do the following:
  - a. In the 'Device Certificate' field, click **Browse** and select the *gateway.cer* certificate file that you saved on your computer in Step 13, and then click **Send File** to upload the certificate to the E-SBC.
  - b. In the 'Trusted Root Certificate Store' field, click **Browse** and select the *certroot.cer* certificate file that you saved on your computer in Step 18, and then click **Send File** to upload the certificate to the E-SBC.

**Figure 4-27: Certificates Page (Uploading Certificate)**

▼ Upload certificate files from your computer

Private key pass-phrase *(optional)*

---

Send **Private Key** file from your computer to the device.  
The file must be in either PEM or PFX (PKCS#12) format.

**Note: Replacing the private key is not recommended but if it's done, it should be over a physically-secure network link.**

---

Send **Device Certificate** file from your computer to the device.  
The file must be in textual PEM format.

---

Send "**Trusted Root Certificate Store**" file from your computer to the device.  
The file must be in textual PEM format.

20. Reset the E-SBC with a burn to flash for your settings to take effect (see Section 4.15 on page 70).



## 4.9 Step 9: Configure SRTP


This step describes how to configure media security. If you configure the Microsoft Mediation Server to use SRTP, you need to configure the E-SBC to operate in the same manner. Note that SRTP was enabled for Lync Server 2013 when you configured an IP Profile for Lync Server 2013 (see Section 4.6 on page 44).

➤ **To configure media security:**

1. Open the Media Security page (**Configuration** tab > **Media** menu > **Media Security**).
2. Configure the parameters as follows:

Parameter	Value
Media Security	<b>Enable</b>
Master Key Identifier (MKI) Size	<b>1</b>
Symmetric MKI Negotiation	<b>Enable</b>

**Figure 4-28: Configuring SRTP**

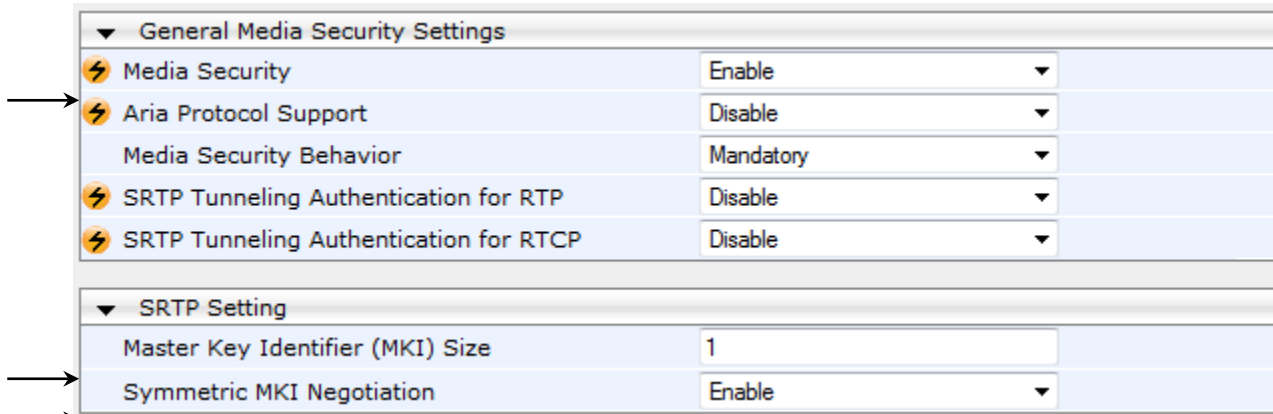

3. Click **Submit**.
4. Reset the E-SBC with a burn to flash for your settings to take effect (see Section 4.15 on page 70).

## 4.10 Step 10: Configure Maximum IP Media Channels

This step describes how to configure the maximum number of required IP media channels. The number of media channels represents the number of DSP channels that the E-SBC allocates to call sessions.




**Note:** In current configuration DSP channels **mandatory** required.

➤ **To configure the maximum number of IP media channels:**

1. Open the IP Media Settings page (**Configuration** tab > **VoIP** menu > **IP Media** > **IP Media Settings**).

**Figure 4-29: Configuring Number of IP Media Channels**

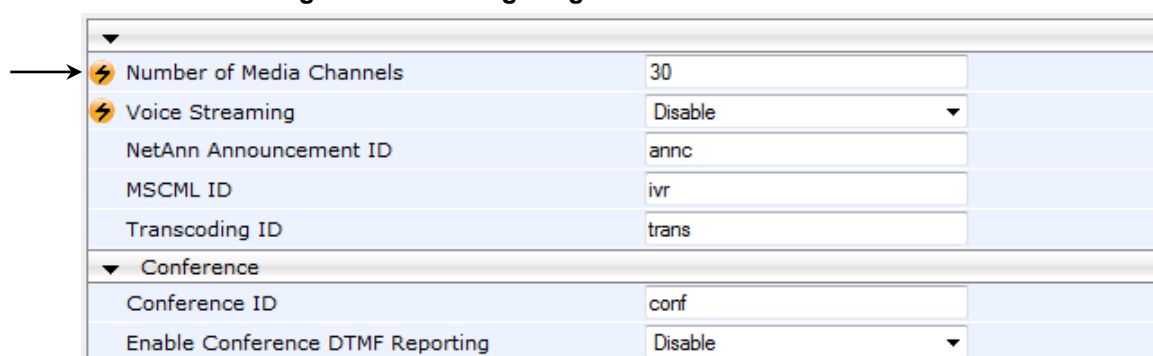

⚡	Number of Media Channels	30
⚡	Voice Streaming	Disable
	NetAnn Announcement ID	annc
	MSCML ID	ivr
	Transcoding ID	trans
▼	Conference	
	Conference ID	conf
	Enable Conference DTMF Reporting	Disable

2. In the 'Number of Media Channels' field, enter the number of media channels according to your environments transcoding calls (e.g., **30**).
3. Click **Submit**.
4. Reset the E-SBC with a burn to flash for your settings to take effect (see Section 4.15 on page 70).

## 4.11 Step 11: Configure IP-to-IP Call Routing Rules

This step describes how to configure IP-to-IP call routing rules. These rules define the routes for forwarding SIP messages (e.g., INVITE) received from one IP entity to another. The E-SBC selects the rule whose configured input characteristics (e.g., IP Group) match those of the incoming SIP message. If the input characteristics do not match the first rule in the table, they are compared to the second rule, and so on, until a matching rule is located. If no rule is matched, the message is rejected. The routing rules use the configured IP Groups to denote the source and destination of the call. As configured in Section 4.5 on page 42, IP Group 1 represents Lync Server 2013, and IP Group 2 represents Broadvox SIP Trunk.

For the interoperability test topology, the following IP-to-IP routing rules need to be configured to route calls between Lync Server 2013 (LAN) and Broadvox SIP Trunk (WAN):

- Terminate SIP OPTIONS messages on the E-SBC that are received from the LAN
- Calls from Lync Server 2013 to Broadvox SIP Trunk
- Calls from Broadvox SIP Trunk to Lync Server 2013

- **To configure IP-to-IP routing rules:**
- 1. Open the IP-to-IP Routing Table page (**Configuration** tab > **VoIP** menu > **SBC** > **Routing SBC** > **IP-to-IP Routing Table**).
- 2. Configure a rule to terminate SIP OPTIONS messages received from the LAN:

Parameter	Value
Index	0
Source IP Group ID	1
Request Type	OPTIONS
Destination Type	Dest Address
Destination Address	internal

**Figure 4-30: Configuring IP-to-IP Routing Rule for Terminating SIP OPTIONS from LAN**

The screenshot shows the 'Edit Record' configuration window with the following fields and values:

- Index: 0
- Source IP Group ID: 1
- Source Username Prefix: \*
- Source Host: \*
- Destination Username Prefix: \*
- Destination Host: \*
- Request Type: OPTIONS
- Message Condition: None
- ReRoute IP Group ID: -1
- Call Trigger: Any
- Destination Type: Dest Address
- Destination IP Group ID: -1
- Destination SRD ID: None
- Destination Address: internal
- Destination Port: 0
- Destination Transport Type: (empty)
- Alternative Route Options: Route Row
- Cost Group: None

Buttons at the bottom right: Submit, Cancel.

- Configure a rule to route calls from Lync Server 2013 to Broadvox SIP Trunk:

Parameter	Value
Index	1
Source IP Group ID	1
Destination Type	IP Group
Destination IP Group ID	2
Destination SRD ID	2

Figure 4-31: Configuring IP-to-IP Routing Rule for LAN to WAN

The screenshot shows the 'Add Record' configuration window with the following fields and values:

- Index: 1
- Source IP Group ID: 1
- Source Username Prefix: \*
- Source Host: \*
- Destination Username Prefix: \*
- Destination Host: \*
- Request Type: All
- Message Condition: None
- ReRoute IP Group ID: 0
- Call Trigger: Any
- Destination Type: IP Group
- Destination IP Group ID: 2
- Destination SRD ID: 2
- Destination Address: (empty)
- Destination Port: 0
- Destination Transport Type: (empty)
- Alternative Route Options: Route Row
- Cost Group: None

Buttons at the bottom right: Submit, Cancel.

4. Configure a rule to route calls from Broadvox SIP Trunk to Lync Server 2013:

Parameter	Value
Index	2
Source IP Group ID	2
Destination Type	IP Group
Destination IP Group ID	1
Destination SRD ID	1

**Figure 4-32: Configuring IP-to-IP Routing Rule for WAN to LAN**

The screenshot shows the 'Add Record' configuration window with the following fields and values:

- Index: 2
- Source IP Group ID: 2
- Source Username Prefix: \*
- Source Host: \*
- Destination Username Prefix: \*
- Destination Host: \*
- Request Type: All
- Message Condition: None
- ReRoute IP Group ID: 0
- Call Trigger: Any
- Destination Type: IP Group
- Destination IP Group ID: 1
- Destination SRD ID: 1
- Destination Address: (empty)
- Destination Port: 0
- Destination Transport Type: (empty)
- Alternative Route Options: Route Row
- Cost Group: None

Buttons at the bottom right: Submit, Cancel.

The configured routing rules are shown in the figure below:

**Figure 4-33: Configured IP-to-IP Routing Rules in IP-to-IP Routing Table**

IP-to-IP Routing Table										
Add + Insert +										
Index	Source IP Group ID	Destination Username Prefix	Destination Host	Request Type	ReRoute IP Group ID	Call Trigger	Destination Type	Destination IP Group ID	Destination SRD ID	Destination Port
0	1	*	*	OPTIONS	-1	Any	Dest Address	-1	None	0
1	1	*	*	All	-1	Any	IP Group	2	2	0
2	2	*	*	All	-1	Any	IP Group	1	1	0

Page 1 of 1 Show 10 records per page View 1 - 3 of 3



**Note:** The routing configuration may change according to your specific deployment topology.

## 4.12 Step 12: Configure IP-to-IP Manipulation Rules

This step describes how to configure IP-to-IP manipulation rules. These rules manipulate the source and / or destination number. The manipulation rules use the configured IP Groups to denote the source and destination of the call. As configured in Section 4.5 on page 42, IP Group 1 represents Lync Server 2013, and IP Group 2 represents Broadvox SIP Trunk.



**Note:** Adapt the manipulation table according to you environment dial plan.

For this interoperability test topology, a manipulation is configured to add the "+" (plus sign) to the destination number for calls from IP Group 2 (Broadvox SIP Trunk) to IP Group 1 (i.e., Lync Server 2013) for any destination username prefix.

➤ **To configure a number manipulation rule:**

1. Open the IP-to-IP Outbound Manipulation page (**Configuration** tab > **VoIP** menu > **SBC > Manipulations SBC > IP-to-IP Outbound**).
2. Click **Add**.
3. Click the **Rule** tab, and then configure the parameters as follows:

Parameter	Value
Index	<b>0</b>
Source IP Group ID	<b>2</b>
Destination IP Group ID	<b>1</b>
Destination Username Prefix	* (asterisk sign)
Manipulated URI	<b>Destination</b>



Figure 4-34: Configuring IP-to-IP Outbound Manipulation Rule – Rule Tab

4. Click the **Action** tab, and then configure the parameters as follows:

Parameter	Value
Prefix to Add	+ (plus sign)

Figure 4-35: Configuring IP-to-IP Outbound Manipulation Rule - Action Tab

5. Click **Submit**.

The figure below shows an example of configured IP-to-IP outbound manipulation rules for calls between IP Group 1 (i.e., Lync Server 2013) and IP Group 2 (i.e., Broadvox SIP Trunk):

**Figure 4-36: Example of Configured IP-to-IP Outbound Manipulation Rules**

IP to IP Outbound Manipulation											
Index	Additional Manipulation	Source IP Group ID	Destination IP Group ID	Source Username Prefix	Source Host	Destination Username Prefix	Destination Host	Request Type	Manipulated URI	Prefix to Add	Suffix to Add
0	No	2	1	*	*	*	*	All	Destination	+	
1	No	1	2	*	*	+	*	All	Destination		
2	No	1	2	*	*	*	*	All	Source		

Page 1 of 1 Show 10 records per page View 1 - 3 of 3

Rule Index	Description
0	Calls from IP Group 2 to IP Group 1 with any destination number (*), add "+" to the prefix of the destination number.
1	Calls from IP Group 1 to IP Group 2 with the prefix destination number "+", remove "+" from this prefix.
2	Calls from IP Group 1 to IP Group 2 with source number prefix "+", remove the "+" from this prefix.

### 4.13 Step 13: Configure Registration Accounts

This step describes how to configure SIP registration accounts. This is required so that the E-SBC can register with the Broadvox SIP Trunk on behalf of Lync Server 2013. The Broadvox SIP Trunk requires registration and authentication to provide service.

In the interoperability test topology, the Served IP Group is Lync Server 2013 (IP Group 1) and the Serving IP Group is Broadvox SIP Trunk (IP Group 2).

➤ **To configure a registration account:**

1. Open the Account Table page (**Configuration** tab > **VoIP** menu > **SIP Definitions** > **Account Table**).

**Figure 4-37: Configuring SIP Registration Account**

Index	Served Trunk Group	Served IP Group	Serving IP Group	User Name	Password	Host Name	Register	Contact User	Application Type
0	-1	1	2	4085827132	*	dn01-05.fs.broadvox.net	Yes	4085827132	SBC

2. Enter an index number (e.g., "0"), and then click **Add**.
3. Configure the account according to the provided information from Broadvox, for example:

Parameter	Value
Served IP Group	<b>1</b> (Lync Server 2013)
Serving IP Group	<b>2</b> (Broadvox SIP Trunk)
Username	<b>4085827132</b> (As provided by Broadvox)
Password	<b>***</b> (As provided by Broadvox)
Host Name	<b>dn01-05.fs.broadvox.net</b>
Register	<b>Yes</b>
Contact User	<b>4085827132</b> (SIP Trunk Pilot Line)
Application Type	<b>SBC</b>

4. Click **Apply**.

## 4.14 Step 14: Miscellaneous Configuration

This section describes miscellaneous E-SBC configuration.

### 4.14.1 Step 14a: Configure DNS Query Methods

This step describes how to configure DNS query modes. Broadvox uses an SRV-based DNS server for FQDN resolution to IP address for the Proxy Set (i.e., SIP Trunk).

➤ **To configure DNS query methods:**

1. Open the Proxy & Registration page (**Configuration** tab > **VoIP** menu > **SIP Definitions > Proxy & Registration**).
2. Configure the following parameters:

Parameter	Value
DNS Query Type	SRV
Proxy DNS Query Type	SRV

**Figure 4-38: Configuring DNS Query Methods**

Use Default Proxy	No
Proxy Name	
Redundancy Mode	Parking
Proxy IP List Refresh Time	60
Enable Fallback to Routing Table	Disable
Prefer Routing Table	No
Always Use Proxy	Disable
Redundant Routing Mode	Routing Table
SIP ReRouting Mode	Standard Mode
Enable Registration	Disable
Registration Time	180
Re-registration Timing [%]	50
Registration Retry Time	30
Registration Time Threshold	0
Re-register On INVITE Failure	Disable
ReRegister On Connection Failure	Disable
Gateway Name	
Gateway Registration Name	
DNS Query Type	SRV
Proxy DNS Query Type	SRV
Subscription Mode	Per Endpoint
Number of RTX Before Hot-Swap	3
Use Gateway Name for OPTIONS	No
User Name	
Password	Default_Passwd
Cnonce	Default_Cnonce
Registration Mode	Per Endpoint
Set Out-Of-Service On Registration Failure	Disable
Challenge Caching Mode	None
Mutual Authentication Mode	Optional
Use Proxy IP as Host	Disable

### 4.14.2 Step 14b: Configure Call Forking Mode

This step describes how to configure the E-SBC's handling of SIP 18x responses received for call forking of INVITE messages. For the interoperability test topology, if a SIP 18x response with SDP is received, the E-SBC opens a voice stream according to the received SDP. The E-SBC re-opens the stream according to subsequently received SIP 18x responses with SDP or plays a ringback tone if a SIP 180 response without SDP is received. **It's mandatory to set this field for the Lync Server 2013 environment.**

➤ **To configure call forking:**

1. Open the General Settings page (**Configuration** tab > **VoIP** menu > **SBC** > **General Settings**).
2. From the 'SBC Forking Handling Mode' drop-down list, select **Sequential**.

**Figure 4-39: Configuring Forking Mode**

Transcoding Mode	Only If Required
SBC No Answer Timeout	600
SBC GRUU Mode	AsProxy
Minimum Session-Expires [sec]	90
BroadWorks Survivability Feature	Disable
Bye Authentication	Disable
SBC User Registration Time	0
SBC Proxy Registration Time	0
SBC Survivability Registration Time	0
→ SBC Forking Handling Mode	Sequential
Allow Unclassified Calls	Reject
SBC Session-Expires [sec]	180
SBC Direct Media	Disable

3. Click **Submit**.


## 4.15 Step 15: Reset the E-SBC

After you have completed the configuration of the E-SBC described in this chapter, save ("burn") the configuration to the E-SBC's flash memory with a reset for the settings to take effect.

➤ **To save the configuration to flash memory:**

1. Open the Maintenance Actions page (**Maintenance** tab > **Maintenance** menu > **Maintenance Actions**).

**Figure 4-40: Resetting the E-SBC**

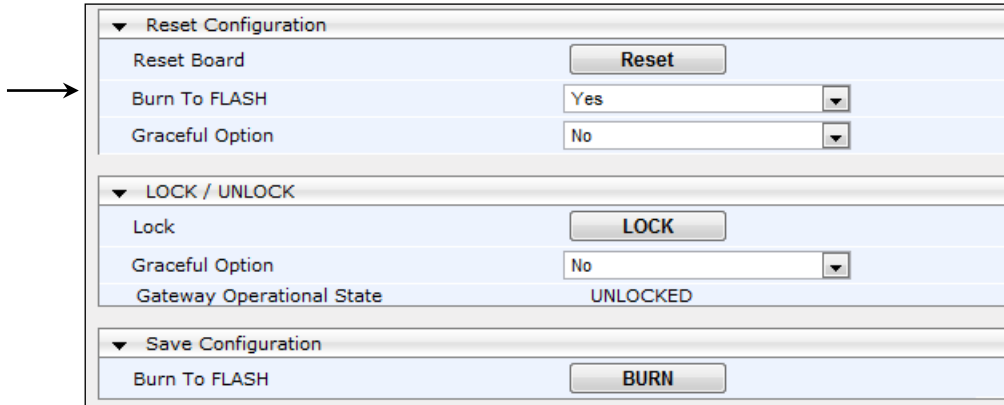

The screenshot shows a web-based configuration interface for an E-SBC. It is divided into three main sections:

- Reset Configuration:** Contains a 'Reset Board' button, a 'Burn To FLASH' dropdown menu set to 'Yes', and a 'Graceful Option' dropdown menu set to 'No'.
- LOCK / UNLOCK:** Contains a 'Lock' button, a 'Graceful Option' dropdown menu set to 'No', and a 'Gateway Operational State' field showing 'UNLOCKED'.
- Save Configuration:** Contains a 'Burn To FLASH' button.

An arrow on the left side of the image points to the 'Reset Board' button in the 'Reset Configuration' section.

2. Ensure that the 'Burn to FLASH' field is set to **Yes** (default).
3. Click the **Reset** button.

## Appendix A AudioCodes INI File

The *ini* configuration file of the E-SBC, corresponding to the Web-based configuration as described in Section 4 on page 31, is shown below:



**Note:** To load and save an *ini* file, use the Configuration File page (**Maintenance** tab > **Software Update** menu > **Configuration File**).

```
;*****
;** Ini File **
;*****

;Board: Mediant 800
;HW Board Type: 69  FK Board Type: 72
;Serial Number: 2542001
;Slot Number: 1
;Software Version: 6.60A.229.001
;DSP Software Version: 5014AE3_R_LD => 660.22
;Board IP Address: 10.15.17.50
;Board Subnet Mask: 255.255.0.0
;Board Default Gateway: 10.15.0.1
;Ram size: 368M  Flash size: 64M
;Num of DSP Cores: 1  Num DSP Channels: 22
;Num of physical LAN ports: 12
;Profile: NONE
;Key features;;Board Type: Mediant 800 ;QOE features:
VoiceQualityMonitoring MediaEnhancement ;Channel Type: RTP DspCh=50
IPMediaDspCh=50 ;DSP Voice features: IpmDetector RTPC-XR
AMRPolicyManagement ;E1Trunks=1 ;T1Trunks=1 ;IP Media: Conf
VoicePromptAnnounc(H248.9) CALEA TrunkTesting POC ;Coders: G723 G729 G728
NETCODER GSM-FR GSM-EFR AMR EVRC-QCELP G727 ILBC EVRC-B AMR-WB G722 EG711
MS_RTA_NB MS_RTA_WB SILK_NB SILK_WB SPEEX_NB SPEEX_WB ;Security: IPSEC
MediaEncryption StrongEncryption EncryptControlProtocol ;Control
Protocols: MGCP MEGACO H323 SIP TPNCPL SASurvivability SBC=30 MSFT CLI
TRANSCODING=30 FEU=100 TestCall=100 ;Default features;;Coders: G711 G726;

;----- Mediant 800 HW components-----
;
; Slot # : Module type : # of ports
;-----
;      1 : Empty
;      2 : Empty
;      3 : Empty
;-----

[SYSTEM Params]

SyslogServerIP = 10.15.17.200
EnableSyslog = 1
NTPServerUTCOffset = 10800
NTPServerIP = '10.15.25.1'
LDAPSEARCHDNSINPARALLEL = 0
```

```
[BSP Params]

PCMLawSelect = 3

[Analog Params]

[ControlProtocols Params]

AdminStateLockControl = 0

[MGCP Params]

[MEGACO Params]

EP_Num_0 = 0
EP_Num_1 = 1
EP_Num_2 = 1
EP_Num_3 = 0
EP_Num_4 = 0

[PSTN Params]

[SS7 Params]

[Voice Engine Params]

ENABLEMEDIASECURITY = 1
SRTPTxPacketMKISize = 1
CallProgressTonesFilename = 'usa_tones_13.dat'

[WEB Params]

WebLogoText = 'Broadvox'
UseWeblogo = 1
UseProductName = 1
HTTPSCipherString = 'RC4:EXP'

[SIP Params]

MEDIACHANNELS = 30
GWDEBUGLEVEL = 5
MEDIASECURITYBEHAVIOUR = 1
DNSQUERYTYPE = 1
PROXYDNSQUERYTYPE = 1
ENABLESBCAPPLICATION = 1
MSLDAPPRIMARYKEY = 'telephoneNumber'
ENABLESYMMETRICMKI = 1
SBCPREFERENCE MODE = 1
SBCFORKINGHANDLINGMODE = 1

[SCTP Params]
```



```
[IPsec Params]

[Audio Staging Params]

[SNMP Params]

[ PhysicalPortsTable ]

FORMAT PhysicalPortsTable_Index = PhysicalPortsTable_Port,
PhysicalPortsTable_Mode, PhysicalPortsTable_NativeVlan,
PhysicalPortsTable_SpeedDuplex, PhysicalPortsTable_PortDescription,
PhysicalPortsTable_GroupMember, PhysicalPortsTable_GroupStatus;
PhysicalPortsTable 0 = "GE_4_1", 1, 1, 4, "User Port #0", "GROUP_1",
"Active";
PhysicalPortsTable 1 = "GE_4_2", 1, 1, 4, "User Port #1", "GROUP_1",
"Redundant";
PhysicalPortsTable 2 = "GE_4_3", 1, 2, 4, "User Port #2", "GROUP_2",
"Active";
PhysicalPortsTable 3 = "GE_4_4", 1, 2, 4, "User Port #3", "GROUP_2",
"Redundant";
PhysicalPortsTable 4 = "FE_5_1", 1, 1, 4, "User Port #4", "GROUP_3",
"Active";
PhysicalPortsTable 5 = "FE_5_2", 1, 1, 4, "User Port #5", "GROUP_3",
"Redundant";
PhysicalPortsTable 6 = "FE_5_3", 1, 1, 4, "User Port #6", "GROUP_4",
"Active";
PhysicalPortsTable 7 = "FE_5_4", 1, 1, 4, "User Port #7", "GROUP_4",
"Redundant";
PhysicalPortsTable 8 = "FE_5_5", 1, 1, 4, "User Port #8", "GROUP_5",
"Active";
PhysicalPortsTable 9 = "FE_5_6", 1, 1, 4, "User Port #9", "GROUP_5",
"Redundant";
PhysicalPortsTable 10 = "FE_5_7", 1, 1, 4, "User Port #10", "GROUP_6",
"Active";
PhysicalPortsTable 11 = "FE_5_8", 1, 1, 4, "User Port #11", "GROUP_6",
"Redundant";

[ \PhysicalPortsTable ]

[ EtherGroupTable ]

FORMAT EtherGroupTable_Index = EtherGroupTable_Group,
EtherGroupTable_Mode, EtherGroupTable_Member1, EtherGroupTable_Member2;
EtherGroupTable 0 = "GROUP_1", 2, GE_4_1, GE_4_2;
EtherGroupTable 1 = "GROUP_2", 2, GE_4_3, GE_4_4;
EtherGroupTable 2 = "GROUP_3", 2, FE_5_1, FE_5_2;
EtherGroupTable 3 = "GROUP_4", 2, FE_5_3, FE_5_4;
EtherGroupTable 4 = "GROUP_5", 2, FE_5_5, FE_5_6;
EtherGroupTable 5 = "GROUP_6", 2, FE_5_7, FE_5_8;

[ \EtherGroupTable ]

[ InterfaceTable ]
```

```

FORMAT InterfaceTable_Index = InterfaceTable_ApplicationTypes,
InterfaceTable_InterfaceMode, InterfaceTable_IPAddress,
InterfaceTable_PrefixLength, InterfaceTable_Gateway,
InterfaceTable_VlanID, InterfaceTable_InterfaceName,
InterfaceTable_PrimaryDNSServerIPAddress,
InterfaceTable_SecondaryDNSServerIPAddress,
InterfaceTable_UnderlyingInterface;
InterfaceTable 0 = 6, 10, 10.15.17.50, 16, 10.15.0.1, 1, "Lync",
10.15.25.1, 0.0.0.0, GROUP_1;
InterfaceTable 1 = 5, 10, 195.189.192.157, 25, 195.189.192.129, 2,
"Broadvox", 80.179.52.100, 80.179.55.100, GROUP_2;

[ \InterfaceTable ]

[ CpMediaRealm ]

FORMAT CpMediaRealm_Index = CpMediaRealm_MediaRealmName,
CpMediaRealm_IPv4IF, CpMediaRealm_IPv6IF, CpMediaRealm_PortRangeStart,
CpMediaRealm_MediaSessionLeg, CpMediaRealm_PortRangeEnd,
CpMediaRealm_IsDefault;
CpMediaRealm 1 = "LanRealm", Lync, , 6000, 10, 6090, 1;
CpMediaRealm 2 = "WanRealm", Broadvox, , 7000, 10, 7090, 0;

[ \CpMediaRealm ]

[ SRD ]

FORMAT SRD_Index = SRD_Name, SRD_MediaRealm, SRD_IntraSRDMediaAnchoring,
SRD_BlockUnRegUsers, SRD_MaxNumOfRegUsers,
SRD_EnableUnAuthenticatedRegistrations;
SRD 1 = "SRDLan", "LanRealm", 0, 0, -1, 1;
SRD 2 = "SRDWan", "WanRealm", 0, 0, -1, 1;

[ \SRD ]

[ ProxyIp ]

FORMAT ProxyIp_Index = ProxyIp_IPAddress, ProxyIp_TransportType,
ProxyIp_ProxySetId;
ProxyIp 0 = "FE15.ilync15.local:5067", 2, 1;
ProxyIp 1 = "dn01-05.fs.broadvox.net", 0, 2;

[ \ProxyIp ]

[ IpProfile ]

FORMAT IpProfile_Index = IpProfile_ProfileName, IpProfile_IPPreference,
IpProfile_CodersGroupID, IpProfile_IsFaxUsed,
IpProfile_JitterBufMinDelay, IpProfile_JitterBufOptFactor,
IpProfile_IPDiffServ, IpProfile_SigIPDiffServ, IpProfile_SCE,
IpProfile_RTPRedundancyDepth, IpProfile_RemoteBaseUDPPort,
IpProfile_CNGmode, IpProfile_VxxTransportType, IpProfile_NSEMode,
IpProfile_IsDTMFUsed, IpProfile_PlayRBTone2IP,
IpProfile_EnableEarlyMedia, IpProfile_ProgressIndicator2IP,
IpProfile_EnableEchoCanceller, IpProfile_CopyDest2RedirectNumber,
    
```

```

IpProfile_MediaSecurityBehaviour, IpProfile_CallLimit,
IpProfile_DisconnectOnBrokenConnection, IpProfile_FirstTxDtmfOption,
IpProfile_SecondTxDtmfOption, IpProfile_RxDTMFOption,
IpProfile_EnableHold, IpProfile_InputGain, IpProfile_VoiceVolume,
IpProfile_AddIEInSetup, IpProfile_SBCExtensionCodersGroupID,
IpProfile_MediaIPVersionPreference, IpProfile_TranscodingMode,
IpProfile_SBCAllowedCodersGroupID, IpProfile_SBCAllowedCodersMode,
IpProfile_SBCMediaSecurityBehaviour, IpProfile_SBCRFC2833Behavior,
IpProfile_SBCAlternativeDTMFMethod, IpProfile_SBCAssertIdentity,
IpProfile_AMDSensitivityParameterSuit, IpProfile_AMDSensitivityLevel,
IpProfile_AMDMaxGreetingTime, IpProfile_AMDMaxPostSilenceGreetingTime,
IpProfile_SBCDiversionsMode, IpProfile_SBCHistoryInfoMode,
IpProfile_EnableQSIGTunneling, IpProfile_SBCFaxCodersGroupID,
IpProfile_SBCFaxBehavior, IpProfile_SBCFaxOfferMode,
IpProfile_SBCFaxAnswerMode, IpProfile_SbcPrackMode,
IpProfile_SBCSessionExpiresMode, IpProfile_SBCRemoteUpdateSupport,
IpProfile_SBCRemoteReinviteSupport,
IpProfile_SBCRemoteDelayedOfferSupport, IpProfile_SBCRemoteReferBehavior,
IpProfile_SBCRemote3xxBehavior, IpProfile_SBCRemoteMultiple18xSupport,
IpProfile_SBCRemoteEarlyMediaResponseType,
IpProfile_SBCRemoteEarlyMediaSupport, IpProfile_EnableSymmetricMKI,
IpProfile_MKISize, IpProfile_SBCEnforceMKISize,
IpProfile_SBCRemoteEarlyMediaRTP, IpProfile_SBCRemoteSupportsRFC3960,
IpProfile_SBCRemoteCanPlayRingback, IpProfile_EnableEarly183,
IpProfile_EarlyAnswerTimeout, IpProfile_SBC2833DTMFPayloadType,
IpProfile_SBCUserRegistrationTime, IpProfile_ResetSRTPStateUponRekey,
IpProfile_AmdMode, IpProfile_SBCReliableHeldToneSource,
IpProfile_SBCPlayHeldTone, IpProfile_SBCRemoteHoldFormat,
IpProfile_DelayTimeForInvite;

IpProfile 1 = "Lync", 1, 0, 0, 10, 10, 46, 40, 0, 0, 0, 0, 2, 0, 0, 0, 0,
-1, 1, 0, 0, -1, 1, 4, -1, 1, 1, 0, 0, "", -1, 0, 0, -1, 0, 1, 0, 0, 0,
0, 8, 300, 400, 0, 0, 0, -1, 0, 0, 1, 1, 3, 1, 1, 0, 3, 2, 1, 0, 1, 1, 1,
0, 1, 0, 1, 0, 0, 0, -1, 1, 0, 1, 0, 0, 0;

IpProfile 2 = "Broadvox", 1, 0, 0, 10, 10, 46, 40, 0, 0, 0, 0, 2, 0, 0,
0, 0, -1, 1, 0, 0, -1, 1, 4, -1, 1, 1, 0, 0, "", 2, 0, 1, 2, 1, 2, 0, 0,
0, 0, 8, 300, 400, 0, 0, 0, -1, 0, 0, 1, 3, 0, 2, 2, 1, 3, 0, 1, 0, 1, 1,
1, 0, 0, 0, 0, 0, 0, 0, -1, 0, 0, 1, 0, 0, 0;

[ \IpProfile ]

[ ProxySet ]

FORMAT ProxySet_Index = ProxySet_EnableProxyKeepAlive,
ProxySet_ProxyKeepAliveTime, ProxySet_ProxyLoadBalancingMethod,
ProxySet_IsProxyHotSwap, ProxySet_SRD, ProxySet_ClassificationInput,
ProxySet_ProxyRedundancyMode;
ProxySet 0 = 0, 60, 0, 0, 0, 0, -1;
ProxySet 1 = 1, 60, 1, 1, 1, 0, -1;
ProxySet 2 = 1, 60, 1, 1, 2, 0, -1;

[ \ProxySet ]

[ IPGroup ]

FORMAT IPGroup_Index = IPGroup_Type, IPGroup_Description,
IPGroup_ProxySetId, IPGroup_SIPGroupName, IPGroup_ContactUser,
IPGroup_EnableSurvivability, IPGroup_ServingIPGroup,
IPGroup_SipReRoutingMode, IPGroup_AlwaysUseRouteTable,
IPGroup_RoutingMode, IPGroup_SRD, IPGroup_MediaRealm,
IPGroup_ClassifyByProxySet, IPGroup_ProfileId, IPGroup_MaxNumOfRegUsers,
IPGroup_InboundManSet, IPGroup_OutboundManSet, IPGroup_RegistrationMode,
IPGroup_AuthenticationMode, IPGroup_MethodList,

```

```

IPGroup_EnableSBCClientForking, IPGroup_SourceUriInput,
IPGroup_DestUriInput, IPGroup_ContactName;
IPGroup 1 = 0, "Lync", 1, "", "", 0, -1, -1, 0, -1, 1, "LanRealm", 1, 1,
-1, -1, -1, 0, 0, "", 0, -1, -1, "";
IPGroup 2 = 0, "Broadvox", 2, "broadvox.net", "", 0, -1, -1, 0, -1, 2,
"WanRealm", 1, 2, -1, -1, -1, 0, 0, "", 0, -1, -1, "";

[ \IPGroup ]

[ Account ]

FORMAT Account_Index = Account_ServedTrunkGroup, Account_ServedIPGroup,
Account_ServingIPGroup, Account_Username, Account_Password,
Account_HostName, Account_Register, Account_ContactUser,
Account_ApplicationType;
Account 0 = -1, 1, 2, "4085827132", *, "dn01-05.fs.broadvox.net", 1,
"4085827132", 2;

[ \Account ]

[ IP2IPRouting ]

FORMAT IP2IPRouting_Index = IP2IPRouting_SrcIPGroupID,
IP2IPRouting_SrcUsernamePrefix, IP2IPRouting_SrcHost,
IP2IPRouting_DestUsernamePrefix, IP2IPRouting_DestHost,
IP2IPRouting_RequestType, IP2IPRouting_MessageCondition,
IP2IPRouting_ReRouteIPGroupID, IP2IPRouting_Trigger,
IP2IPRouting_DestType, IP2IPRouting_DestIPGroupID,
IP2IPRouting_DestSRDID, IP2IPRouting_DestAddress, IP2IPRouting_DestPort,
IP2IPRouting_DestTransportType, IP2IPRouting_AltRouteOptions,
IP2IPRouting_CostGroup;
IP2IPRouting 0 = 1, "*", "*", "*", "*", 6, , -1, 0, 1, -1, , "internal",
0, -1, 0, ;
IP2IPRouting 1 = 1, "*", "*", "*", "*", 0, , -1, 0, 0, 2, 2, "", 0, -1,
0, ;
IP2IPRouting 2 = 2, "*", "*", "*", "*", 0, , -1, 0, 0, 1, 1, "", 0, -1,
0, ;

[ \IP2IPRouting ]

[ SIPInterface ]

FORMAT SIPInterface_Index = SIPInterface_NetworkInterface,
SIPInterface_ApplicationType, SIPInterface_UDPPort, SIPInterface_TCPPort,
SIPInterface_TLSPort, SIPInterface_SRD, SIPInterface_MessagePolicy,
SIPInterface_TLSMutualAuthentication, SIPInterface_TCPKeepaliveEnable,
SIPInterface_ClassificationFailureResponseType;
SIPInterface 1 = "Lync", 2, 0, 0, 5067, 1, , -1, 0, 500;
SIPInterface 2 = "Broadvox", 2, 5060, 5060, 0, 2, , -1, 0, 500;

[ \SIPInterface ]

[ IPOutboundManipulation ]

FORMAT IPOutboundManipulation_Index =
IPOutboundManipulation_IsAdditionalManipulation,
    
```

```
IPOutboundManipulation_SrcIPGroupID,
IPOutboundManipulation_DestIPGroupID,
IPOutboundManipulation_SrcUsernamePrefix, IPOutboundManipulation_SrcHost,
IPOutboundManipulation_DestUsernamePrefix,
IPOutboundManipulation_DestHost, IPOutboundManipulation_RequestType,
IPOutboundManipulation_ReRouteIPGroupID, IPOutboundManipulation_Trigger,
IPOutboundManipulation_ManipulatedURI,
IPOutboundManipulation_RemoveFromLeft,
IPOutboundManipulation_RemoveFromRight,
IPOutboundManipulation_LeaveFromRight, IPOutboundManipulation_Prefix2Add,
IPOutboundManipulation_Suffix2Add,
IPOutboundManipulation_PrivacyRestrictionMode;
IPOutboundManipulation 0 = 0, 2, 1, "*", "*", "*", "*", 0, -1, 0, 1, 0,
0, 255, "+1", "", 0;
IPOutboundManipulation 1 = 0, 1, 2, "*", "*", "+", "*", 0, -1, 0, 1, 1,
0, 255, "", "", 0;
IPOutboundManipulation 2 = 0, 1, 2, "*", "*", "*", "*", 0, -1, 0, 0, 1,
0, 255, "", "", 0;

[ \IPOutboundManipulation ]

[ CodersGroup0 ]

FORMAT CodersGroup0_Index = CodersGroup0_Name, CodersGroup0_pTime,
CodersGroup0_rate, CodersGroup0_PayloadType, CodersGroup0_Sce;
CodersGroup0 0 = "g711Alaw64k", 20, 0, -1, 1;
CodersGroup0 1 = "g711Ulaw64k", 20, 0, -1, 1;

[ \CodersGroup0 ]

[ CodersGroup2 ]

FORMAT CodersGroup2_Index = CodersGroup2_Name, CodersGroup2_pTime,
CodersGroup2_rate, CodersGroup2_PayloadType, CodersGroup2_Sce;
CodersGroup2 0 = "g729", 20, 0, -1, 1;

[ \CodersGroup2 ]

[ AllowedCodersGroup2 ]

FORMAT AllowedCodersGroup2_Index = AllowedCodersGroup2_Name;
AllowedCodersGroup2 0 = "g729";

[ \AllowedCodersGroup2 ]

[ RoutingRuleGroups ]

FORMAT RoutingRuleGroups_Index = RoutingRuleGroups_LCREnable,
RoutingRuleGroups_LCRAverageCallLength, RoutingRuleGroups_LCRDefaultCost;
RoutingRuleGroups 0 = 0, 0, 1;

[ \RoutingRuleGroups ]

[ ResourcePriorityNetworkDomains ]
```

```
FORMAT ResourcePriorityNetworkDomains_Index =  
ResourcePriorityNetworkDomains_Name,  
ResourcePriorityNetworkDomains_Ip2TelInterworking;  
ResourcePriorityNetworkDomains 1 = "dsn", 0;  
ResourcePriorityNetworkDomains 2 = "dod", 0;  
ResourcePriorityNetworkDomains 3 = "drsn", 0;  
ResourcePriorityNetworkDomains 5 = "uc", 1;  
ResourcePriorityNetworkDomains 7 = "cuc", 0;  
  
[ \ResourcePriorityNetworkDomains ]
```

**Reader's Notes**



## Configuration Note